JVC

SERVICE MANUAL

COLOUR TELEVISION

BASIC CHASSIS
CG

AV-14F4TEE

This service manual mainly consists of the following items:
• The items which differ from those for the AV-14FTR service manual.
• The initial value for each setting item.
For details other than those described in this manual, please refer to the following service manual.
Reference Service Manual: AV-14FTR Service Manual (No. 51751, Jul. 2000)

Note: The page in parentheses shows the one for the AV-14FTR service manual (No. 51751, Jul. 2000).

HOW TO IDENTIFY MODEL

While referring to the illustration given below, identify model name on the rating label affixed to the rear cover.

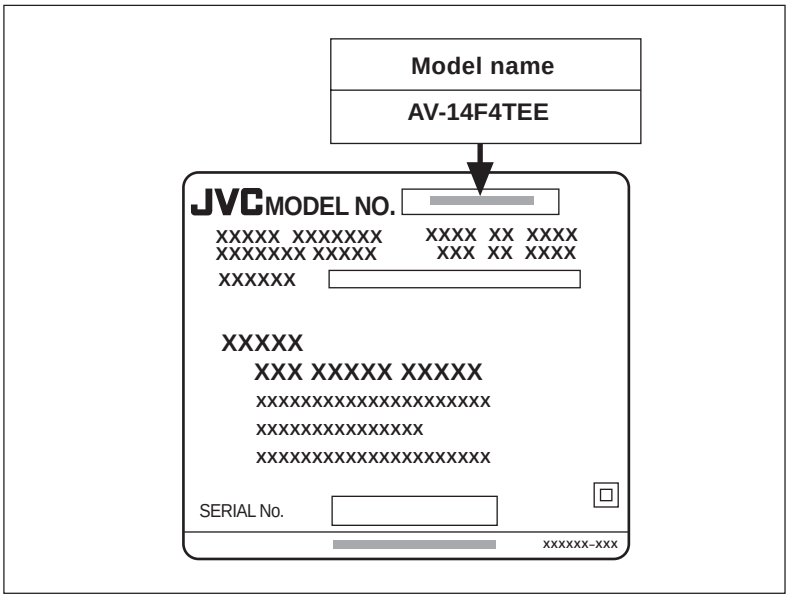

COPYRIGHT © 2000 VICTOR COMPANY OF JAPAN, LTD.

No. 56075
Sep. 2000

PARTS DIFFERENCE TABLE

The different parts between AV-14FTR and AV-14F4TEE are described below:

⚠	REF. NO.	AV-14FTR PART No.	AV-14F4TEE PART No.	PART NAME	DESCRIPTION
■ **EXPLODED VIEW PARTS LIST (Page 32)**					
	1	LC10831-001D-H	**LC10831-004B-H**	FRONT CABINET	
⚠	19	LC20377-010B-H	**LC20377-009A-H**	RATING LABEL	
■ **PRINTED WIRING BOARD PARTS LIST [MAIN PWB ASSY] (Page 34-)**					
	—	SCG-1016A-H2	**SCG-1259A-H2**	MAIN PWB ASSY	
■ **PACKING PARTS LIST (Page 38)**					
	1	LC10453-091A-H	**GG10056-009A-H**	PACKING CASE	
⚠	6	LCT0732-001A-H	**LCT0756-001A-H**	INST BOOK	
	—	———	**BT-54012-1**	WARRANTY CARD	

SPECIFICATIONS (Page 2)

Item		Content
Dimensions (W × H × D)		462mm × 340.5mm × 375mm
Mass		10kg
TV RF System		B / G, I, D / K, K1
Colour System	TV Mode	PAL / SECAM
	VIDEO Mode	PAL / SECAM / NTSC3.58 / NTSC4.43
Teletext System		FLOF (Fastext), WST (World standard system)
Receiving Frequency	VHF (VL)	46.25MHz ~ 168.25MHz
	VHF (VH)	175.25MHz ~ 463.25MHz
	UHF	471.25MHz ~ 863.25MHz
	CATV	● Cable TVs of Mid (X-Z, S1-S10) Super (S11-S20) & Hyper (S21-S41) bands receivable
Intermediate Frequency	VIF Carrier	38.0MHz
	SIF Carrier	31.5MHz (6.5MHz) 32.0MHz (6.0MHz) 32.5MHz (5.5MHz) 33.5MHz (4.5MHz)
Colour Sub Carrier Frequency		PAL (4.43MHz) SECAM (4.40625MHz / 4.25MHz) NTSC (3.58MHz / 4.43MHz)
Aerial Input Terminal		75Ω Unbalanced
Power Input		AC110 ~ 240V, 50/60Hz
Power Consumption		70W (Max.) / 47W (Avg.)
Picture Tube		Visible size : 34cm measured diagonally
High Voltage		22.5kV ± 1.5kV (at zero beam current)
Speaker		5cm × 9cm Oval type × 2
Audio Output		3W (Monaural)
Input	Video	1Vp-p, 75Ω
	Audio	500mVrms (–4dBs), High impedance
Output	Video	1Vp-p, 75Ω
	Audio	500mVrms (–4dBs), Low impedance
Headphone Jack		Stereo mini jack (3.5ø)
Remote Control Unit		RM-C223-2C (Battery size : AA/R06/UM-3 × 2)

Design & specifications are subject to change without notice.

SPECIFIC SERVICE INSTRUCTIONS

SETTING OF SYSTEM CONSTANT SET (Page 9)

Table 1

Setting item	Setting contents	Setting value
COLOUR	MULTI. → TRIPLE → PAL	TRIPLE
BILINGUAL	YES → NO	NO
TUNER	MU → MA	MA
ECO SENSOR	YES → NO	YES
LANGUAGE	E/R/C/U → E/R/C → E/R/U → E/C	E/R/U
B/B SOUND	ON → OFF	OFF
LOCK	YES ↔ 10 ↔ 20 ↔ ... ↔ 230 ↔ 240 ↔ 250	180
COLOUR AUTO	YES → NO	NO
QSS	MINT → MQSS	MINT
ALC	YES → NO	NO
TEXT RATE	10 ↔ 20 ↔ 40 ↔ 80	20
AMP TUNER	YES → NO	NO

USER SETTING VALUES (Page 9)

Table 2

Setting item	Setting value	Setting item	Setting value
SUB POWER	ON	PICTURE MODE (VSM)	BRIGHT
CHANNEL POSITION	1 POSITION	VNR	OFF
CHANNEL PRESET	Refer to OPERATING INSTRUCTION	OFF TIMER	OFF
		LANGUAGE	ENGLISH
VOLUME	Appropriate sound volume	AUTO SHUTOFF	OFF
TV/VIDEO	TV	ECO SENSOR	OFF
ON SCREEN DISPLAY	POSITION NUMBER DISPLAY	BLUE BACK	OFF
COLOUR SYSTEM	AUTO PAL	ON TIMER	PR1 0:00
SOUND SYSTEM	B / G	CHILD LOCK	OFF

SERVICE ADJUSTMENTS

■ Initial Setting Value

■ IF CIRCUIT ADJUSTMENT -- Adjustment of DELAY POINT (Page 17)

Setting (Adjustment) Item	Variable range	Initial setting value
DELAY POINT (AGC TAKE-OVER)	0 ~ 127	43

■ V/C (VIDEO/CHROMA) CIRCUIT ADJUSTMENT (Page 17)

[SUB MENU 2. V/C]

Setting item \ Colour system		Variable range	Initial setting value			
			PAL	SECAM	NTSC 3.58	NTSC 4.43
1. CUT OFF (R / G / B)		–128 ~ +127	–50	←	←	←
2. DRIVE (R / B)		–64 ~ +63	0	←	←	←
3. BRIGHT		–128 ~ +127	0	←	←	←
4. CONT.		-64 ~ +63	0	←	←	←
5. COLOUR (P / S / N3 / N4)		–64 ~ +63	0	←	←	←
6. TINT (N3 / N4)	TV / VIDEO	–64 ~ +63	———	———	0 / +8	0 / 0
7. SECAM BL ADJUST		–32 ~ +31	0	←	←	←
8. SHARP	TV / VIDEO	–32 ~ +31	–15 / +5	←	←	←

: Do not adjust.

Adjustment of SUB COLOUR-II (Page 20)

Adjustment part	Description
5. COLOUR	
PAL COLOUR	Value **(A)** in the figure: Set to **+9V (W & G)**.
SECAM COLOUR	Value **(A)** in the figure: Set to **+3V (W & G)**.
NTSC 3.58 COLOUR	Value **(A)** in the figure: Set to **+9V (W & G)**.

Adjustment of SUB TINT-II (Page 21)

Adjustment part	Description
6. TINT	
NTSC 3.58 TINT	Value **(B)** in the figure: Set to **+7V (W & Cy).**

■ DEFLECTION CIRCUIT ADJUSTMENT (Page 23)

[SUB MENU 3. DEF]

Setting item	Adjustment name	Variable range	Initial setting value	
			50Hz	60Hz
1. VER. POSITION	Vertical center	–4 ~ +3	–2	–3
2. HOR. POSITION	Horizontal center	–16 ~ +15	+1	+4
3. VER. HEIGHT	Vertical height	–64 ~ +63	–40	0
4. VER. LINEARITY	Vertical linearity	–32 ~ +31	+13	–3
5. VER. SCURVE	Vertical scurve	–32 ~ +31	–32	0
6. HOR. VCO ADJUST	Horizontal VCO	–64 ~ +63	0	0

: Do not adjust.

■ VSM PRESET ADJUSTMENT (Page 25)

[Setting Values for SUB MENU 4. VSM PRESET]

VSM preset / VSM mode / Setting item	BRIGHT	STANDARD	SOFT
TINT SETTING VALUE	+15	←	←
COLOUR SETTING VALUE	+15	←	←
BRIGHT SETTING VALUE	+15	←	←
CONT. SETTING VALUE	+30	+15	+11
SHARP SETTING VALUE	+15	+15	+12

: Do not adjust.

■ PRESET ADJUSTMENT (Page 26)

[SUB MENU 5. PRESET]

Setting item \ Colour system		Initial setting value			
		PAL	SECAM	NTSC 3.58	NTSC 4.43
1. C-TRAP FIX		1	←	←	←
2. SHARP PEAK		0	←	———	———
3. ABL		1	←	———	———
4. GAMMA		0	←	←	←
5. Y.DELAY TIME	TV	0	2	2	3
	VIDEO	0	2	0	2
6. BLACK EXP START		3	←	←	←
7. C-BPF	TV	1	←	0	←
	VIDEO	1	←	←	←
8. CW/SCP		0	←	←	←
9. V.IF DET. LEVEL		0	←	←	←
11. IF AGC MIN.		0	←	←	←
12. V.IF AGC		0	←	←	←
13. V.IF PMOD		0	←	←	←
19. VNR		15	←	←	←
20. RGB LIM.		1	←	←	←
21. RGB LIMIT LEVEL		2	←	←	←
23. TEXT H. POSITION		–3	←	←	←
24. READ DATA		———	———	———	———

: Do not adjust.

Setting item \ TV RF system	Initial setting value			
	B/G	I	D/K	M
10. S.IF DET. LEVEL	0	←	←	←
14. S.IF BPF BW ADJUST	0	←	←	←
15. S.IF TRAP FO ADJUST	0	←	←	←
16. S.IF TRAP FO ADJUST 2	0	←	←	←
17. S.IF-TRAP	0	←	←	←
18. S.IF-BPF	0	←	←	1
22. S.IF SW	1	←	←	0

: Do not adjust.

JVC

VICTOR COMPANY OF JAPAN, LIMITED
TELEVISION RECEIVER DIVISION 1106 Heta, Iwai-city, Ibaraki-prefecture, 306-0698, Japan

JVC

SERVICE MANUAL

COLOUR TELEVISION

BASIC CHASSIS
CG

AV-14FTR

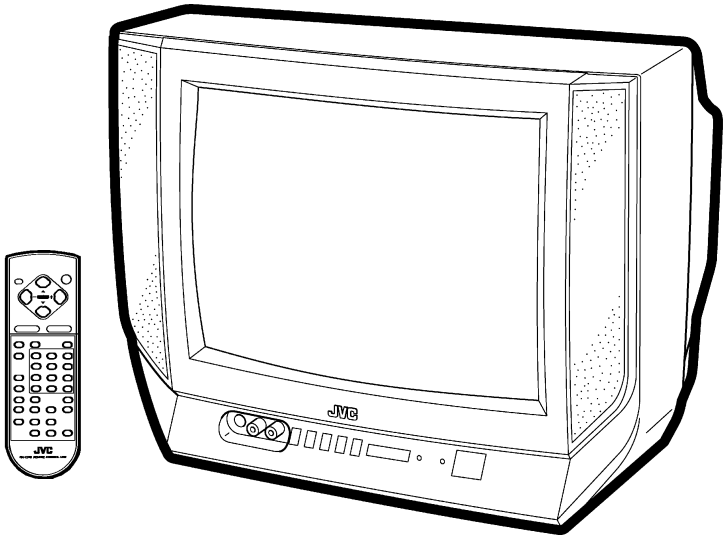

CONTENTS

■ SPECIFICATIONS ····· 2
■ SAFETY PRECAUTIONS ····· 3
■ FEATURES ····· 4
■ FUNCTIONS ····· 5
■ SPECIFIC SERVICE INSTRUCTIONS ····· 6
■ SERVICE ADJUSTMENTS ····· 12
★ STANDARD CIRCUIT DIAGRAM (APPENDIX) ····· 2-1
■ PARTS LIST ····· 31

COPYRIGHT © 2000 VICTOR COMPANY OF JAPAN, LTD.

No.51751
Jul. 2000

SPECIFICATIONS

ITEM		CONTENT
Dimensions(W × H × D)		46.2cm × 34.1cm × 37.5cm
Mass		10kg
TV RF System		B / G, I, D / K, K1
Colour System	RF Mode	PAL / SECAM
	VIDEO Mode	PAL / SECAM / NTSC3.58 / NTSC4.43
Teletext System		FASTEXT (United Kingdom System), WST(Standard system)
Picture Tube		Visible size : 34cm measured diagonally
High Voltage		22.5kV±1.5kV(at zero beam current)
Receiving Frequency	VHF (VL)	46.25MHz～168.25MHz
	VHF (VH)	175.25MHz～463.25MHz
	UHF	471.25MHz～863.25MHz
	CATV	Cable TVs of Mid (X-Z, S1-S10) Super (S11-S20) & Hyper (S21-S41) bands receivable
Intermediate Frequency	VIF Carrier	38.0MHz
	SIF Carrier	32.5MHz(5.5MHz) 31.5MHz (6.5MHz) 32.0MHz (6.0MHz)
Colour Sub Carrier Frequency		PAL (4.43MHz), SECAM (4.40625MHz / 4.25MHz) NTSC (3.58MHz / 4.43MHz)
Power Input		AC110～240V, 50 / 60Hz
Power Consumption		70W (Max.) / 47W (Avg.)
Speaker		5cm × 9 cm, Oval type × 2
Audio Output		3W (monaural)
Aerial Input Terminal		75Ω Unbalanced
Input	Video	1V(p-p), 75Ω, RCA × 2 (Front / Rear)
(Front / Rear, Bridged connection)	Audio	500mV(rms) (-4dBs), High impedance, RCA × 2 (Front / Rear)
Output	Video	1V(p-p), 75Ω, RCA × 1
	Audio	500mV(rms) (-4dBs), Low impedance, RCA × 1
Remote Control Unit		RM-C223-2C (Battery size : AA / R06 / UM-3 × 2)
Headphone jack		3.5mm stereo mini jack (Sound is monaural)

Design and specifications are subject to change without notice.

SAFETY PRECAUTIONS

1. The design of this product contains special hardware, many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.

2. Alterations of the design or circuitry of the products should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.

3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the parts list of Service manual. **Electrical components having such features are identified by shading on the schematics and by (⚠) on the parts list in Service manual.** The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the parts list of Service manual may cause shock, fire, or other hazards.

4. **Don't short between the LIVE side ground and ISOLATED (NEUTRAL) side ground or EARTH side ground when repairing.**
   Some model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : (⊥) side GND, the ISOLATED(NEUTRAL) : (⏚) side GND and EARTH : (⏚) side GND. Don't short between the LIVE side GND and ISOLATED(NEUTRAL) side GND or EARTH side GND and never measure with a measuring apparatus (oscilloscope etc.) the LIVE side GND and ISOLATED(NEUTRAL) side GND or EARTH side GND at the same time.
   If above note will not be kept, a fuse or any parts will be broken.

5. If any repair has been made to the chassis, it is recommended that the B1 setting should be checked or adjusted (See ADJUSTMENT OF B1 POWER SUPPLY).

6. The high voltage applied to the picture tube must conform with that specified in Service manual. Excessive high voltage can cause an increase in X-Ray emission, arcing and possible component damage, therefore operation under excessive high voltage conditions should be kept to a minimum, or should be prevented. If severe arcing occurs, remove the AC power immediately and determine the cause by visual inspection (incorrect installation, cracked or melted high voltage harness, poor soldering, etc.). To maintain the proper minimum level of soft X-Ray emission, components in the high voltage circuitry including the picture tube must be the exact replacements or alternatives approved by the manufacturer of the complete product.

7. Do not check high voltage by drawing an arc. Use a high voltage meter or a high voltage probe with a VTVM. Discharge the picture tube before attempting meter connection, by connecting a clip lead to the ground frame and connecting the other end of the lead through a 10kΩ 2W resistor to the anode button.

8. When service is required, observe the original lead dress. Extra precaution should be given to assure correct lead dress in the high voltage circuit area. Where a short circuit has occurred, those components that indicate evidence of overheating should be replaced. Always use the manufacturer's replacement components.

9. **Isolation Check**
   (Safety for Electrical Shock Hazard)
   After re-assembling the product, always perform an isolation check on the exposed metal parts of the cabinet (antenna terminals, video/audio input and output terminals, Control knobs, metal cabinet, screwheads, earphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

(1) **Dielectric Strength Test**
The isolation between the AC primary circuit and all metal parts exposed to the user, particularly any exposed metal part having a return path to the chassis should withstand a voltage of 3000V AC (r.m.s.) for a period of one second.
(. . . . Withstand a voltage of 1100V AC (r.m.s.) to an appliance rated up to 120V, and 3000V AC (r.m.s.) to an appliance rated 200V or more, for a period of one second.)
This method of test requires a test equipment not generally found in the service trade.

(2) **Leakage Current Check**
Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground (water pipe, etc.). Any leakage current must not exceed 0.5mA AC (r.m.s.).
However, in tropical area, this must not exceed 0.2mA AC (r.m.s.).

● **Alternate Check Method**
Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Use an AC voltmeter having 1000 ohms per volt or more sensitivity in the following manner. Connect a 1500Ω 10W resistor paralleled by a 0.15μF AC-type capacitor between an exposed metal part and a known good earth ground (water pipe, etc.). Measure the AC voltage across the resistor with the AC voltmeter. Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75V AC (r.m.s.). This corresponds to 0.5mA AC (r.m.s.).
However, in tropical area, this must not exceed 0.3V AC (r.m.s.). This corresponds to 0.2mA AC (r.m.s.).

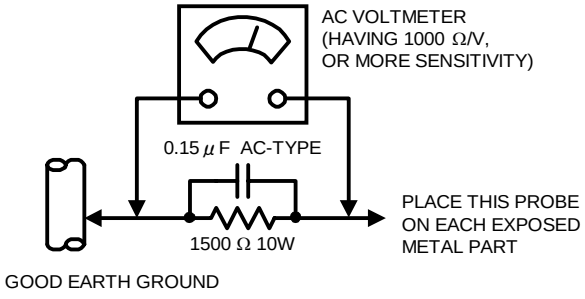

FEATURES

- New chassis design enables use of an interactive on-screen control.
- Wide range voltage (110V～240V) AC power input.
- With AUDIO / VIDEO INPUT & OUTPUT terminal.
- MUTING button can reduce the audio level to zero instantly.
- Functional remote control to operate TV set (for channel select, volume control, power ON/OFF, etc.) from a distance.
- I^2C bus control utilizes single chip ICs for IF, V/C, DEF. VSM PRESET, PRESET & TURBO TIMER.
- By means of AUTO PROGRAM, the TV stations can be selected automatically and the TV channels can also be rearranged automatically.
- The TELETEXT SYSTEM has a built-in FASTEXT (United Kingdom system) and WST (Standard system).
- Built-in ECO MODE (ECONOMY, ECOLOGY)
  In accordance with the brightness in a room, the brightness and / of contrast of the picture can be adjusted automatically to make the optimum picture which is easy on the eye.
- Built – in ON TIMER, RETURN + & CHILD LOCK.

SYSTEM BLOCK DIAGRAM

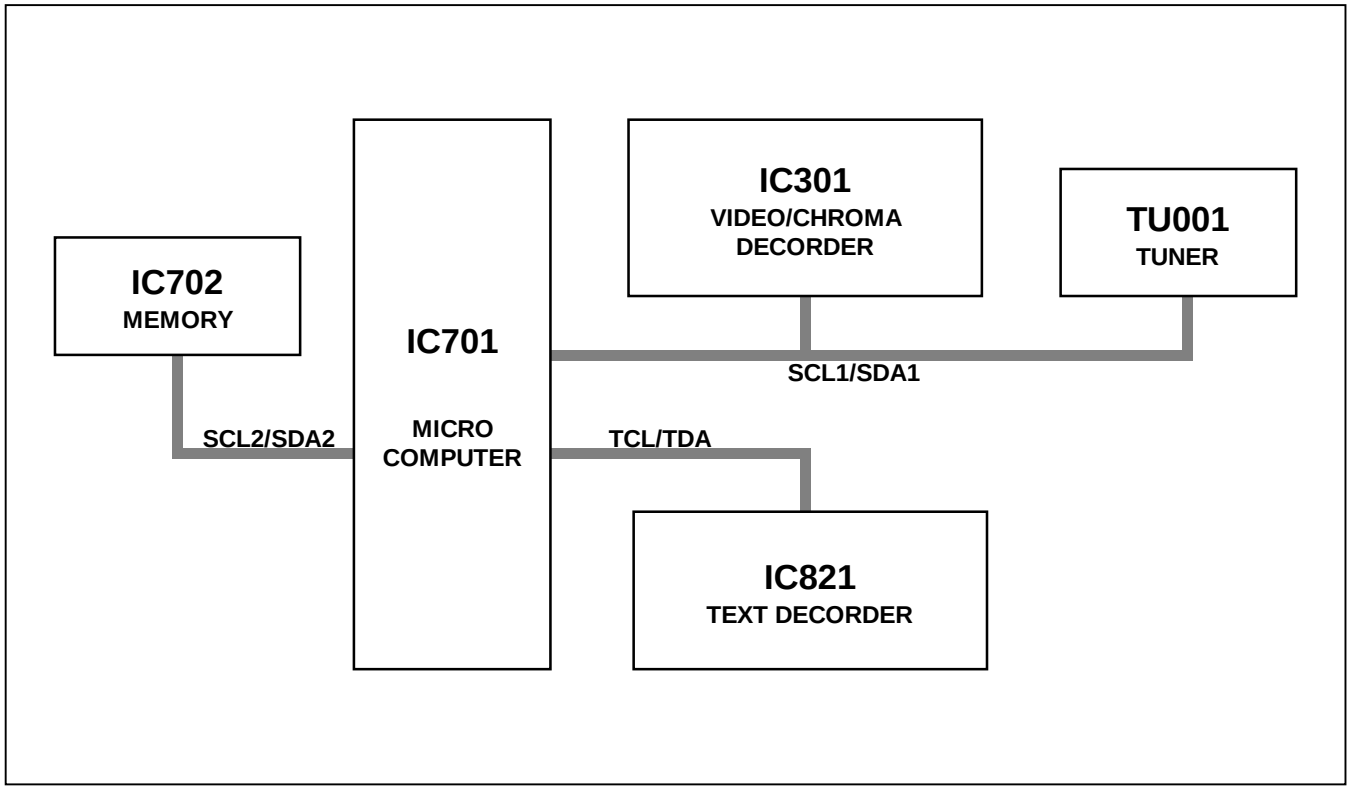

FUNCTIONS

FRONT PANEL

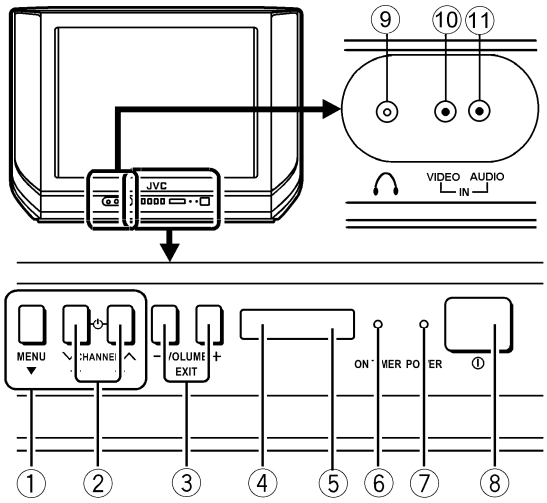

① MENU buttons
- MENU button
- MENU –/+ buttons

② CHANNEL ∨/∧ buttons
③ VOLUME –/+ buttons
④ ECO sensor
⑤ Remote control sensor
⑥ ON TIMER lamp
⑦ POWER lamp
⑧ Main power button
⑨ Headphone jack
⑩ VIDEO INPUT
⑪ AUDIO INPUT

REMOTE CONTROL UNIT

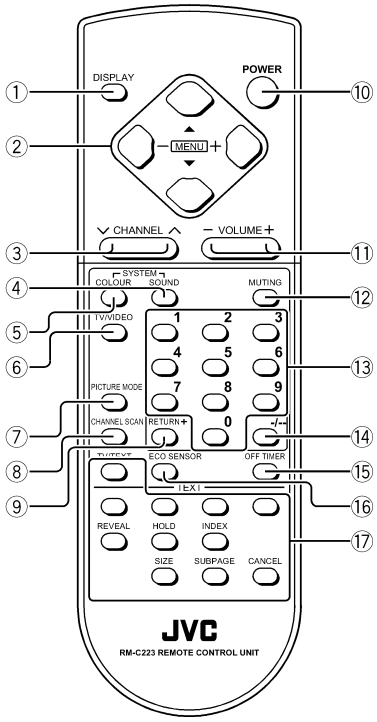

① DISPLAY button
② MENU buttons
- MENU ▲/▼ buttons
- MENU –/+ buttons

③ CHANNEL ∨/∧ buttons
④ SOUND SYSTEM button
⑤ COLOUR SYSTEM button
⑥ TV/VIDEO button
⑦ PICTURE MODE button
⑧ CHANNEL SCAN button
⑨ RETURN + button
⑩ POWER button
⑪ VOLUME –/+ buttons
⑫ MUTING button
⑬ Number buttons
⑭ -/-- button
⑮ OFF TIMER button
⑯ ECO SENSOR button
⑰ Teletext buttons

REAR PANEL

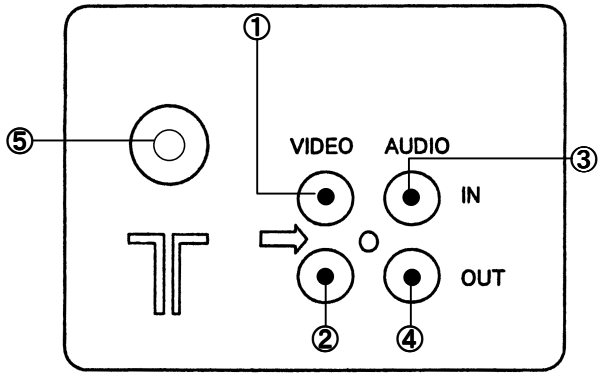

① VIDEO INPUT
② VIDEO OUTPUT
③ AUDIO INPUT
④ AUDIO OUT PUT
⑤ AERIAL INPUT

SPECIFIC SERVICE INSTRUCTIONS

DISASSEMBLY PROCEDURE

REMOVING THE REAR COVER

1. Unplug the power plug.
2. As shown in figure, remove the **5** screws marked Ⓐ and a screw marked Ⓑ .
3. Withdraw the rear cover toward you.

REMOVING THE MAIN PW BOARD

- After removing the rear cover.

1. Slightly raise the both sides of the MAIN PW BOARD by hand and remove the PWB stopper marked Ⓒ from the front cabinet.
2. Withdraw the MAIN PW BOARD backward.
   (If necessary, take off the wire clamp, connectors etc.)

REMOVING THE SPEAKER

- After removing the rear cover.

1. As shown in figure, remove the **2** screws marked Ⓓ .
2. Follow the same steps when removing the other hand speaker.

CHECKING THE MAIN PW BOARD

1. To check the back side of the PW Board.
   1) Pull out the MAIN PW Board. (Refer to REMOVING THE MAIN PW Board)
   2) Erect the PW Board vertically so that you can easily check the back side of the PW Board.

[CAUTION]

- When erecting the PW Board, be careful so that there will be no contacting with other PW Board.
- Before turning on power, make sure that the CRT earth wire and other connector are properly connected.

WIRE CLAMPING AND CABLE TYING

1. Be sure to clamp the wire.
2. Never remove the cable tie used for tying the wires together. Should it be inadvertently removed, be sure to tie the wires with a new cable tie.

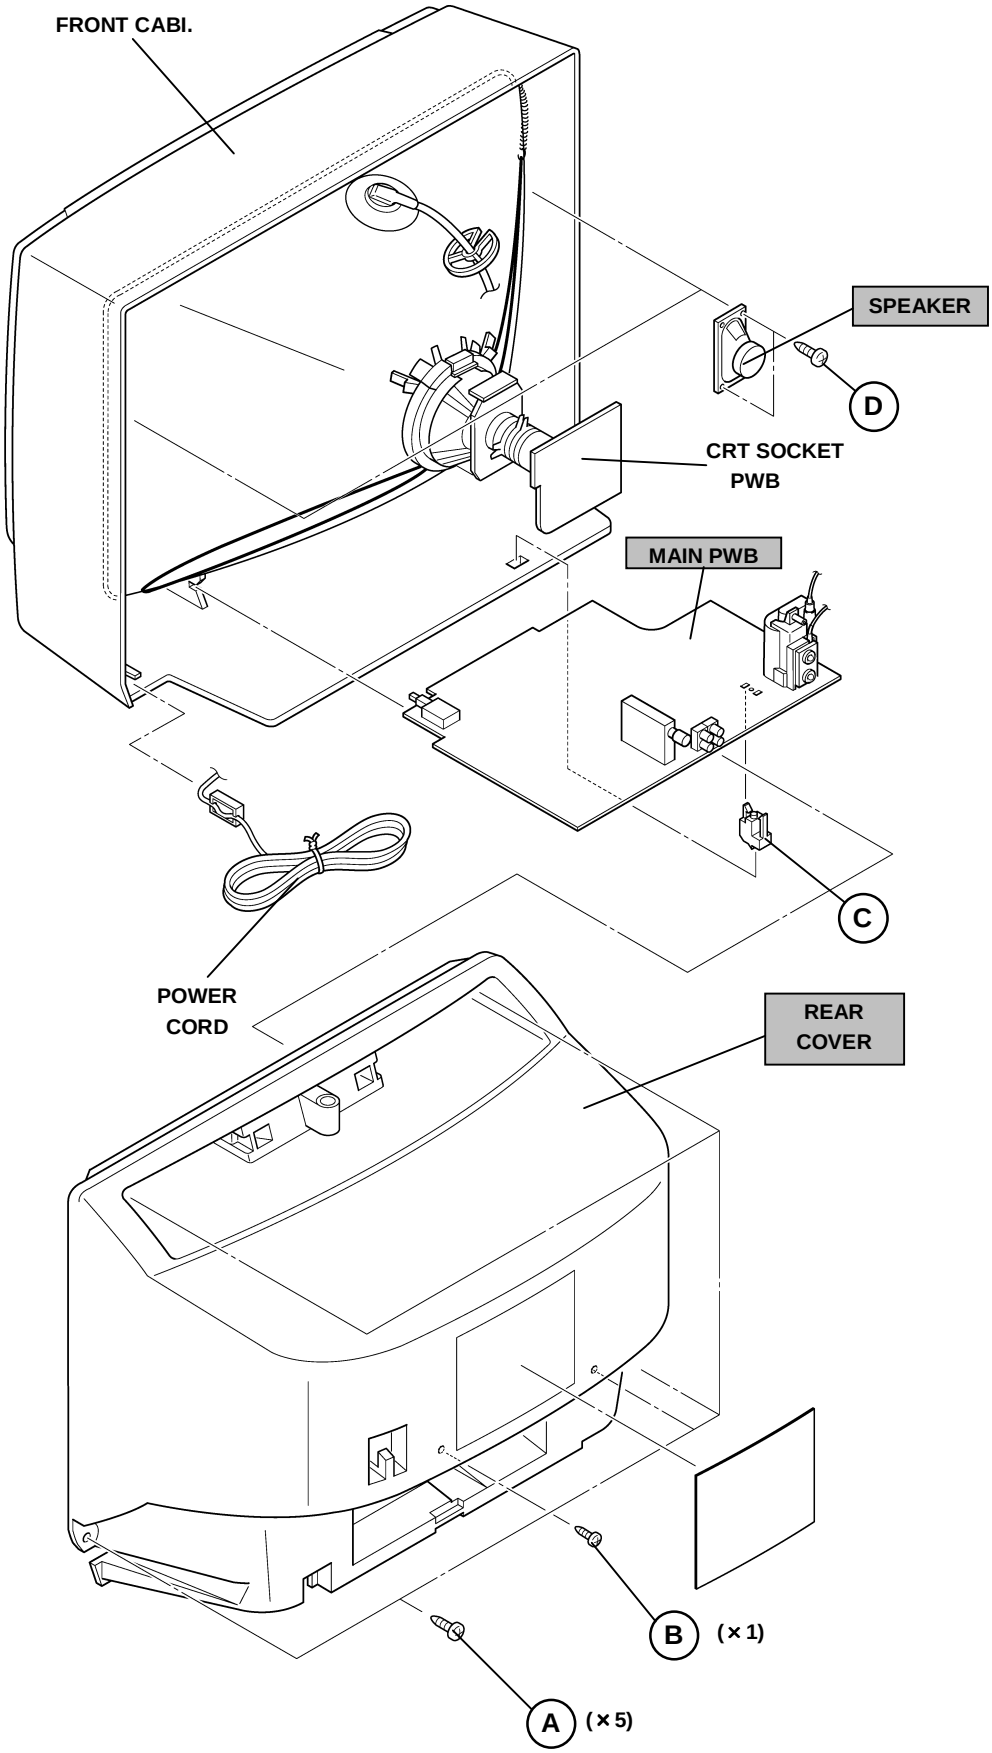
FRONT CABI.
SPEAKER
D
CRT SOCKET
PWB
MAIN PWB
C
POWER
CORD
REAR
COVER
B
(× 1)
A
(× 5)

REPLACEMENT OF MEMORY ICs

1.MEMORY ICs

This model uses memory ICs. This memory IC data are for proper operation of the video and deflection circuits.
When replacing memory ICs, be sure to use ICs written with the initial values of data.

2.PROCEDURE FOR REPLACING MEMORY ICs

(1) Power off

Switch the power off and disconnect the power plug from the wall outlet.

(2) Replace ICs

Be sure to use memory ICs written with the initial data values.

(3) Power on

Connect the power plug into the wall outlet and switch the power on.

(4) Check and set SYSTEM CONSTANT SET

It must not adjust without adjustment signals.

1) Press the **DISPLAY** key and the **PICTURE MODE** key of the REMOTE CONTROL UNIT simultaneously.
2) The SERVICE MENU screen of Fig. 1 will be displayed.
3) While the SERVICE MENU is displayed, again press the **DISPLAY** key and **PICTURE MODE** key simultaneously, and the SYSTEM CONSTANT SET screen of Fig. 2 will be displayed.
4) Check the setting values of the SYSTEM CONSTANT SET of Table 1. If the value is different, select the setting item with the **MENU** ▼/▲ key, and set the correct value with the **MENU** - / + key.
5) Press the **DISPLAY** key twice, and return to the normal screen.

(5) Receive channel of setting

Refer to the **OPERATING INSTRUCTIONS** and set the receive channels (channels preset) as described

(6) User Setting

Check the user setting value of Table 2, and if setting value is different, set the correct value.

For setting, refer to the **OPERATING INSTRUCTIONS**.

(7) Setting of SERVICE MENU

Verify the setting items of the SERVICE MENU of Table 3, and reset where necessary.

For setting, refer to the **SERVICE ADJUSTMENTS**.

SERVICE MENU

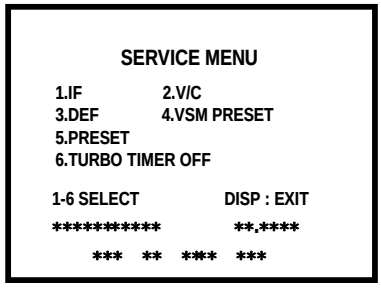

Fig.1

SYSTEM CONSTANT- Ⅰ

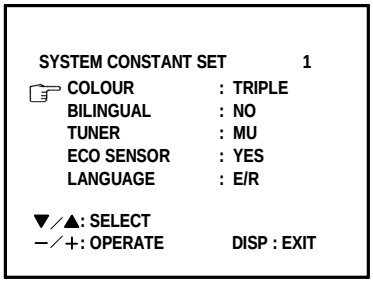

SYSTEM CONSTANT- Ⅱ

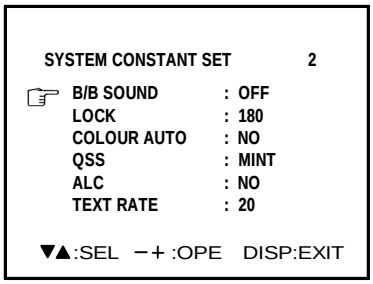

SYSTEM CONSTANT-Ⅲ

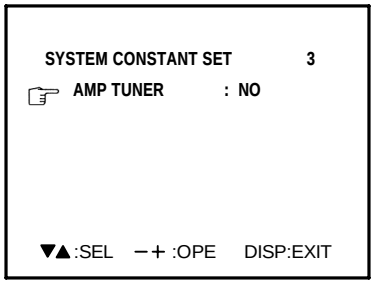

Fig.2

KEY ASSIGNMENT OF REMOTE CONTROL UNIT

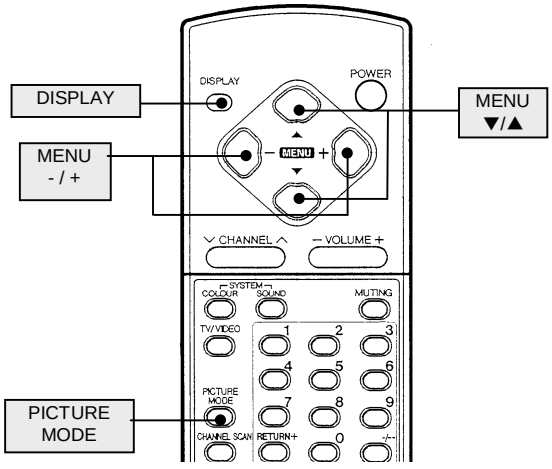

SETTING OF SYSTEM CONSTANT SET

Setting item	Setting contents	Setting value
COLOUR	MULTI → TRIPLE → PAL	TRIPLE
BILINGUAL	YES → NO	NO
TUNER	MU→MA	MU
ECO SENSOR	YES → NO	YES
LANGUAGE	E/R/A/F→E/A/F→E/A→E/F	E/R
B/B SOUND	ON → OFF	OFF
LOCK	YES ↔10 ↔20 ↔～ ↔230 ↔ 240 ↔ 250	180
COLOUR AUTO	YES → NO	NO
QSS	MINT →MQSS	MINT
ALC	YES → NO	NO
TEXT RATE	10↔ 20↔ 40↔ 80	20
AMP TUNER	YES → NO	NO

Table 1

USER SETTING VALUES

Setting item	Setting value	Setting item	Setting value
1. Setting of FUNCTIONS		2. Setting of MENU	
MAIN POWER	OFF	ON TIMER	PR1 0:00
SUB POWER	ON	VNR	OFF
CHANNEL POSITION	1 POSITION	AUTO SHUTOFF	OFF
VOLUME	Appropriate sound volume	CHILD LOCK	OFF
TV/VIDEO(INPUT)	TV	BLUE BACK	OFF
ON SCREEN DISPLAY	POSITION NUMBER DISPLAY	CHANNEL PRESET	Refer to OPERATING INSTRUCTION
COLOUR SYSTEM	AUTO PAL	LANGUAGE	ENGLISH
SOUND SYSTEM	B / G	TINT	Refer to VSM PRESET
OFF TIMER	OFF	COLOUR	Refer to VSM PRESET
PICTURE MODE (VSM)	BRIGHT	BRIGHT	Refer to VSM PRESET
ECO SENSOR	OFF	CONT.	Refer to VSM PRESET
		SHARP	Refer to VSM PRESET

Table 2

SERVICE MENU SETTING ITEMS

Service menu	Setting item	Service menu	Setting item
1. IF	1. VCO 2. DELAY POINT	**5. PRESET**	1. C-TRAP FIX 2. SHARP PEAK 3. ABL 4. GAMMA 5. Y DELAY TIME 6. BLACK EXP START 7. C-BPF 8. CW/SCP 9. VIF DET LEVEL 10. SIF DET LEVEL 11. IF AGC MIN. 12. VIF AGC 13. VIF PMOD 14. SIF BPF BW ADJUST 15. SIF TRAP FO ADJUST 16. SIF TRAP FO ADJUST 2 17. SIF –TRAP 18. SIF –BPF 19. VNR 20. RGB LIM 21. RGB LIMIT LEVEL 22. SIF SW 23. TEXT H POSITION 24. READ DATA **DO NOT ADJUST**
2. V / C	1. CUT OFF (R / G / B) 2. DRIVE (R / B) 3. BRIGHT 4. CONT. 5. COLOUR (P / S / N3 /N4) 6. TINT (N3 / N4) 7. SECAM BL ADJUST 8. SHARP (TV/VIDEO) **DO NOT ADJUST**		
3. DEF	1. VER. POSITION 2. HOR. POSITION 3. VER. HEIGHT 4. VER. LINEARITY 5. VER. SCURVE 6. HOR. VCO ADJUST **DO NOT ADJUST**		
4. VSM PRESET (BRIGHT/STD/SOFT)	TINT COLOUR BRIGHT CONT. SHARP	**6. TURBO TIMER**	ON or OFF **(Should be OFF)** If it is ON, the timer in TIMER mode changes from 1 minute into 1 sec temporarily. (It is easier to checks the Operation of TIMER) If you turn the TV power off, this setting becomes OFF automatically.

Table 3

REPLACEMENT OF IC301 (IF V/C DECODER)

- **For the IC301(IF V/C DECODER) of this model, all data are written in the micro-computer. So, write the data in the micro-computer in accordance with the following procedures before starting adjustment.**

REPLACING PROCEDURES

(1) Turn the POWER OFF.
(2) Replace the IC301 with a new one.
(3) While pressing MENU button and VOL+ button ON the FRONT CABINET simultaneously, turn the POWER ON. When the POWER is turned ON, the data is written in the micro-computer immediately.

FRONT CABINET

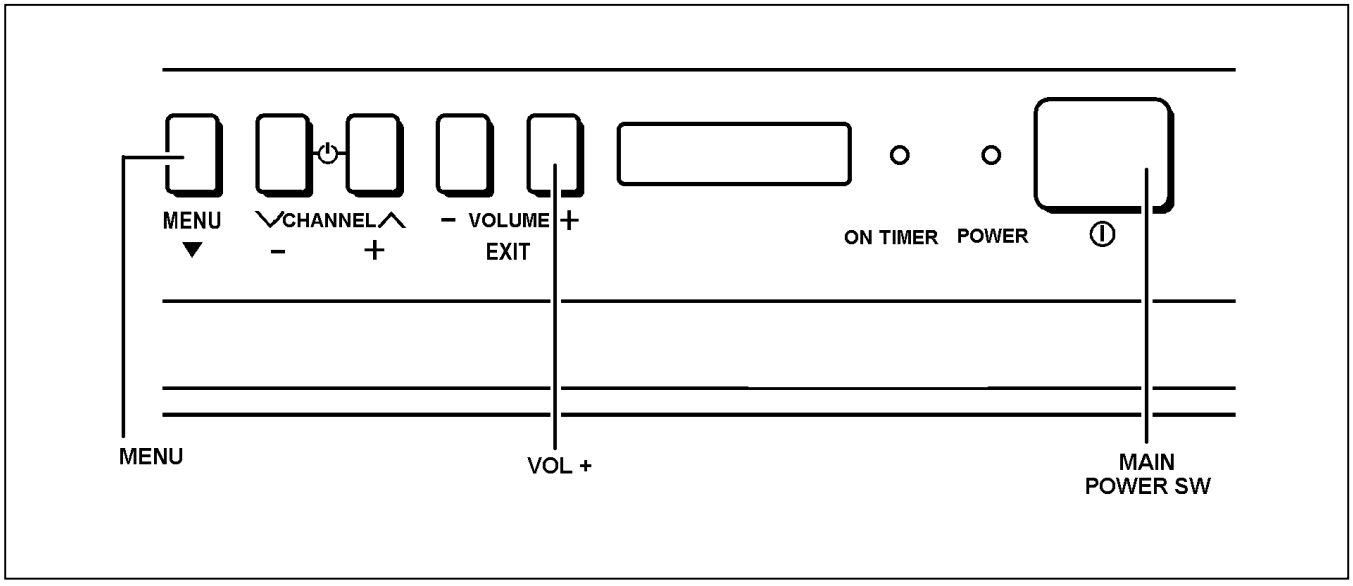

SERVICE ADJUSTMENTS

BEFORE STARTING SERVICE ADJUSTMENT

1. **There are 2 way of adjusting this TV: One is with the REMOTE CONTROL UNIT and the other is the conventional method using adjustment parts and components.**
2. **The setting (adjustment) using the REMOTE CONTROL UNIT is made on the basis of the initial setting values. The setting values which adjust the screen to the optimum condition can be different from the initial setting values.**
3. Make sure that connection is correctly made to AC power source.
4. Turn on the power of the TV and measuring equipment for warming up for at least 30 minutes before staring adjustment.
5. If the receive or input signal is not specified, use the most appropriate signal for adjustment.
6. Never touch parts (such as variable resistors, transformers and condensers) not shown in the adjustment items of this service adjustment.
7. Preparation for adjustment (presetting):
   Unless otherwise specified in the adjustment items, preset the following functions with the REMOTE CONTROL UNIT.

PICTURE MODE (VSM)	BRIGHT
TINT / COLOUR / BRIGHT / CONT / SHARP	Refer to VSM PRESET on page 25.
ECO SENSOR	OFF
VNR	OFF
BLUE BACK	OFF

MEASUREMENT INSTRUMENT AND FIXTURES

1. DC voltmeter (or digital voltmeter)
2. Oscilloscope
3. Signal generator (Pattern generator) [PAL / SECAM / NTSC]
4. Remote control unit

ADJUSTMENT ITEMS

Adjustment item	Adjustment item
B1 POWER SUPPLY	DEFLECTION circuit adjustment
FOCUS adjustment	VSM PRESET adjustment
IF circuit adjustment	PRESET adjustment
VIDEO/CHROMA circuit adjustment	PURITY / CONVERGENCE Adjustment

BASIC OPERATION OF SERVICE MENU

1. TOOL OF SERVICE MENU OPERATION

Operate the SERVICE MENU with the REMOTE CONTROL UNIT.

2. SERVICE MENU ITEMS

With the SERVICE MENU, various settings (adjustments) can be made, and they are broadly classified in the following items of settings :

- 1. IF ····· For entering/adjusting the setting values (adjustment values) of the IF circuit.
- 2. V/C ····· For entering/adjusting the setting values (adjustment values) of the VIDEO/CHROMA circuit.
- 3. DEF····· For entering / adjusting the setting values (adjustment values) of the DEFLECTION circuit.
- 4. VSM PRESET ····· For setting the values of BRIGHT, STANDARD, and SOFT.
  (VSM : video status memory)
- 5. PRESET····· This is used when the PRESET MODE is adjusted. **[Do not adjust]**
- 6. TURBO TIMER ····· For quick setting the values of TIMER COUNT-adjustable not only by minutes but also by second.
  If it is on, the time in TIMER mode changes from 1 minute into 1 second temporarily.
  If you turn the TV power off, this setting becomes OFF automatically. (applicable to OFF TIMER, ON TIMER, AUTO SHUTOFF). **[Should be OFF]**

3. BASIC OPERATION OF SERVICE MENU

(1) How to enter SERVICE MENU

Press the DISPLAY key and the PICTURE MODE key of the REMOTE CONTROL UNIT simultaneously.
The SERVICE MENU screen of Fig. 1 will be displayed.

SERVICE MENU

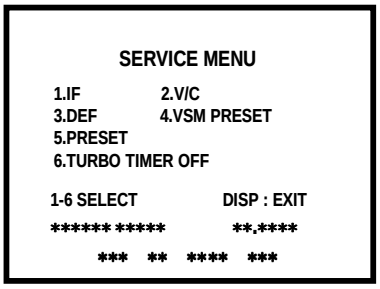

Fig.1

(2) Selection of SUB MENU SCREEN

Press one of the keys 1 ～ 6 of the REMOTE CONTROL UNIT,
and select the SUB MENU SCREEN (See Fig.2 on the next page) from the SERVICE MENU.

SERVICE MENU → SUB MENU

1. IF
2. V / C
3. DEF
4. VSM PRESET
5. PRESET
6. TURBO TIMER

(3) Method of Setting

- Once the setting values are set, they are memorized automatically.
- It must not adjust without signal.

1) **1. IF**

[1. VCO]

① 1 Key ·····	Select **1. IF.**
② 1 Key ·····	Select 1. VCO(CW).
③ VCO(CW) ·····	Adjust VCO(CW) while watching the colour (yellow / blue) of the characters on the screen. For details, refer to the adjustment table.
④ DISPLAY Key ·····	When this is pressed twice, you will return to the SERVICE MENU.

[2. DELAY POINT]

① 1 Key ·····	Select **1. IF.**
② 2 Key ·····	Select 2. DELAY POINT.
③ MENU - / + Key ·····	Set (adjust) the setting values of the setting items.
④ DISPLAY Key ·····	When this is pressed twice, you will return to the SERVICE MENU.

2) **2. V/C, 3. DEF, 4.VSM PRESET and 5. PRESET**

① 2～5 Keys ·····	Select one from **2. V/C, 3.DEF, 4.VSM PRESET and 5. PRESET.**
② MENU △ / ▽ key ·····	Select setting items.
③ MENU - / + Key ·····	Set (adjust) the setting values of the setting items. (Use the number keys of the REMOTE CONTROL UNIT for setting of WHITE BALANCE and BLACK OFFSET. For the setting, refer to each item concerned.)
④ DISPLAY Key ·····	When this is pressed , you will return to the SERVICE MENU.

3) **6. TURBO TIMER**

① By pressing the 6-key, you can change the ON/OFF position. **[Should be OFF]**

(4) Release of SERVICE MENU

After completing the setting, return to the SERVICE MENU by pressing the DISPLAY key, then again press the DISPLAY key to return to the normal screen.

SUB MENU SCREEN (Fig.2)

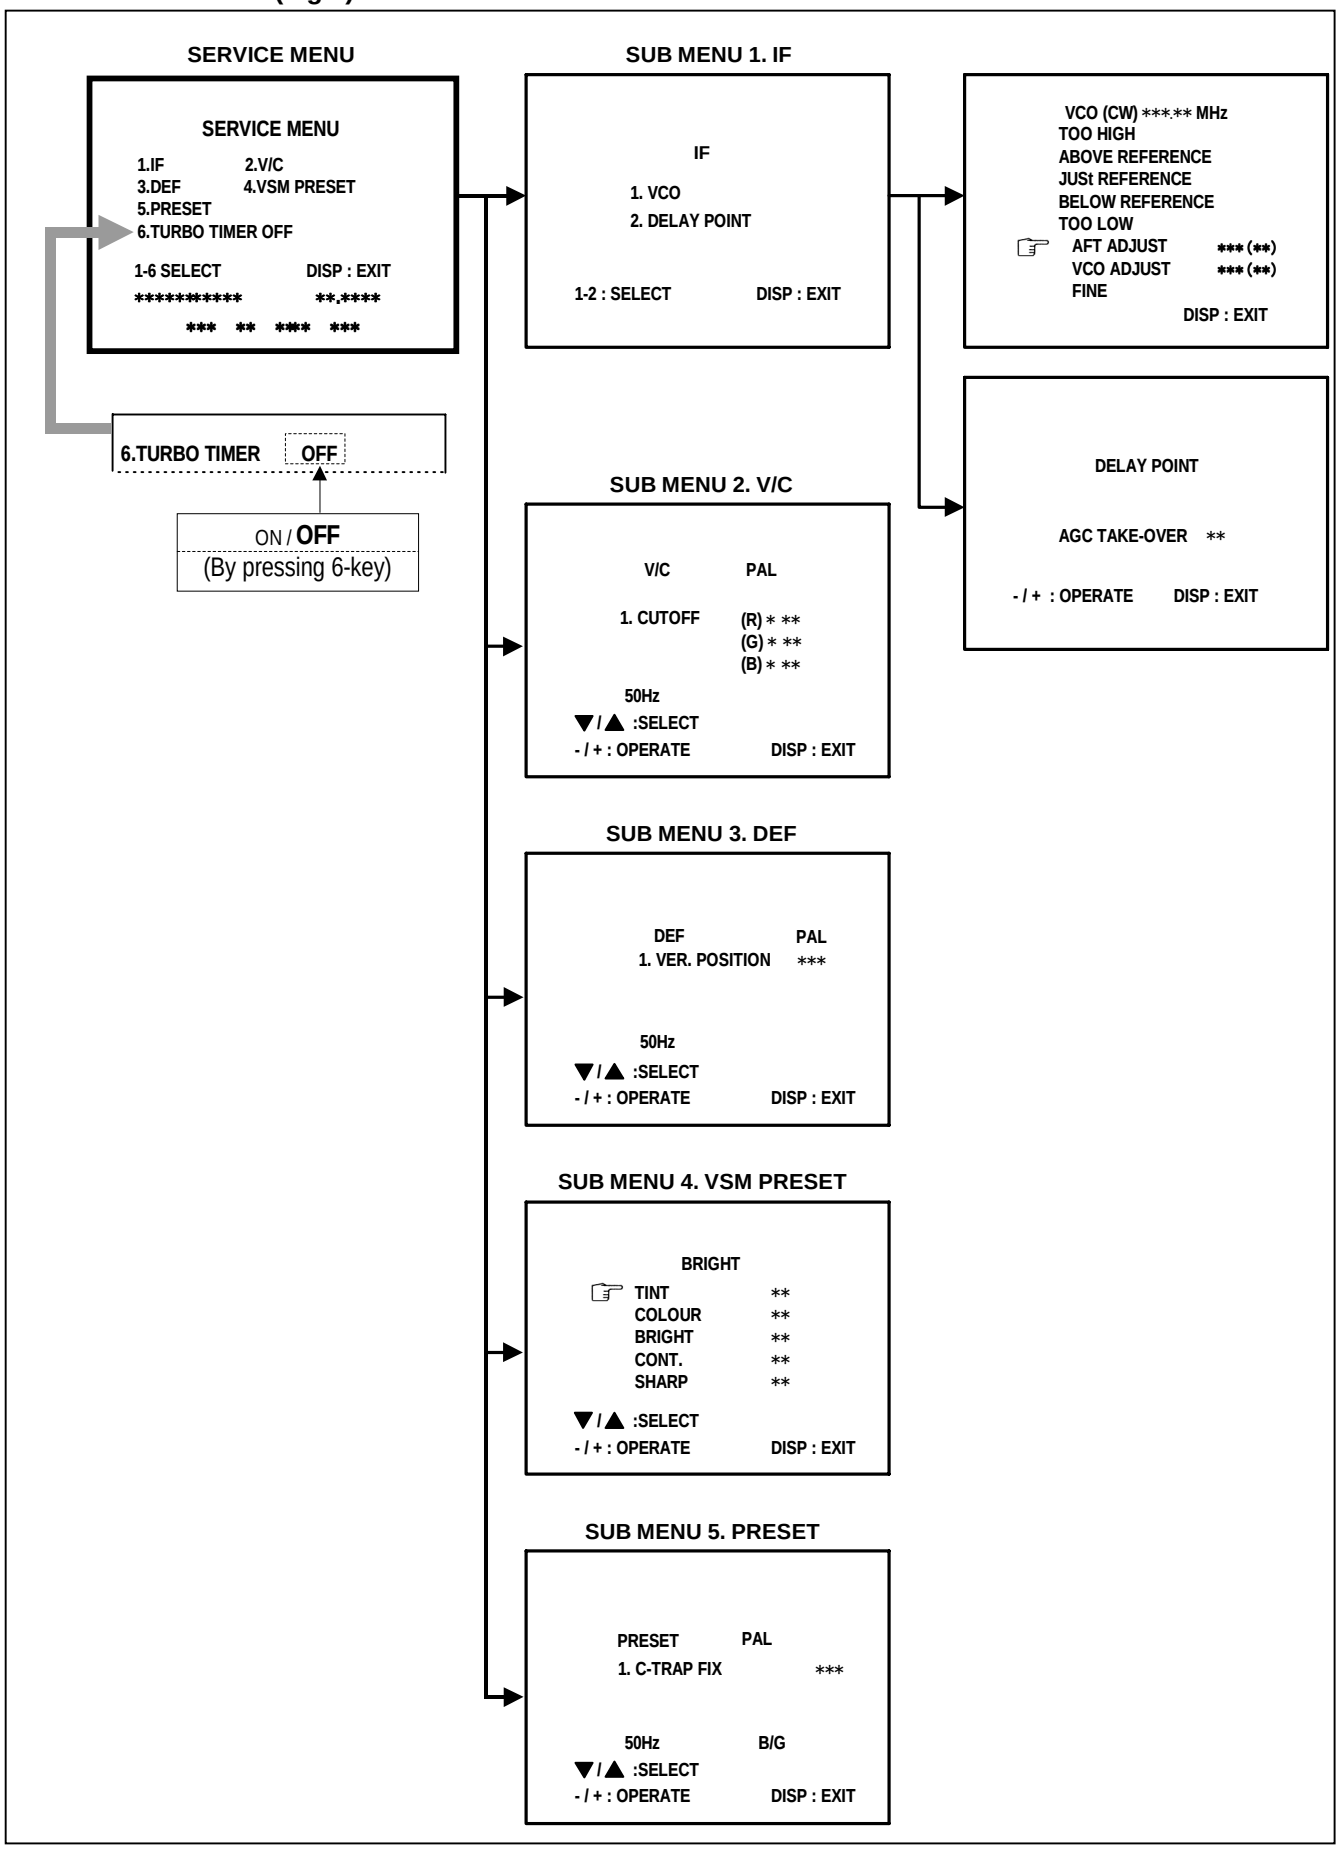

ADJUSTMENT LOCATIONS

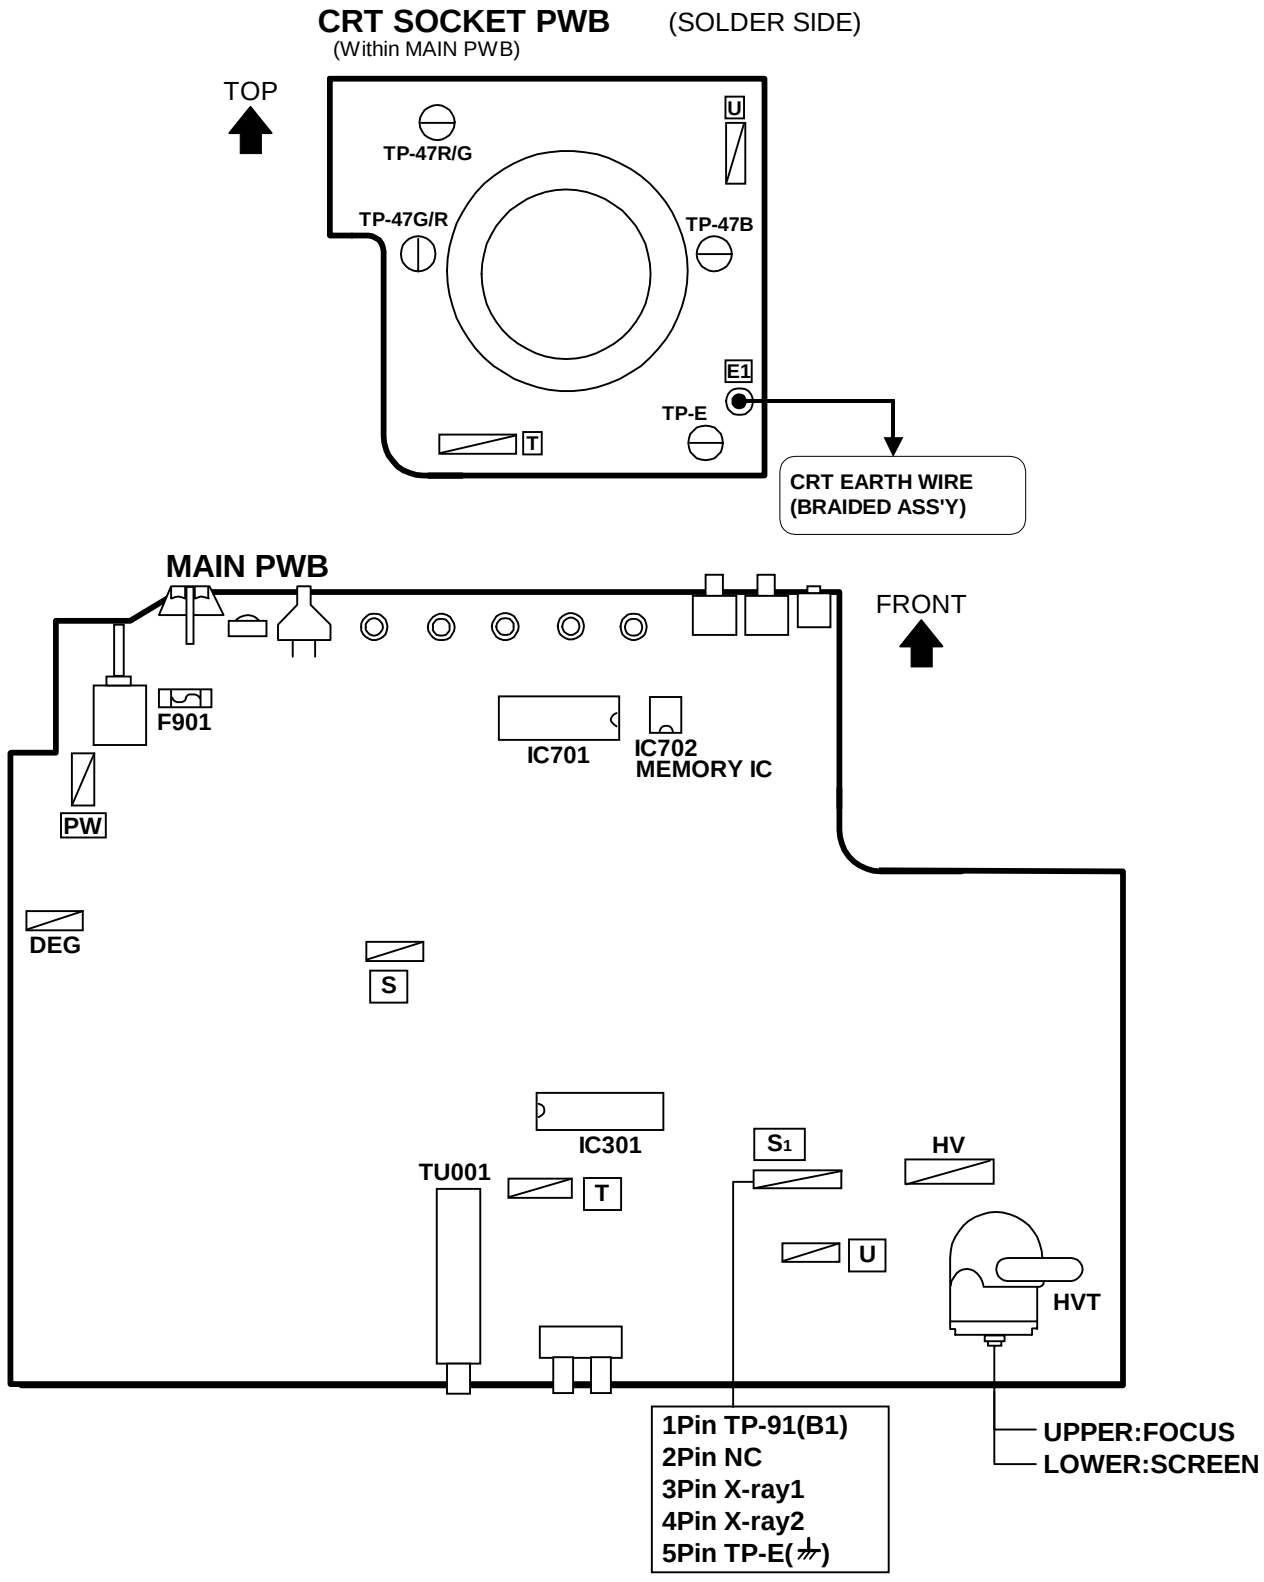

ADJUSTMENTS

B1 POWER SUPPLY

Item	Measuring instrument	Test point	Adjustment part	Description
Check of B1 Power Supply	**Signal generator** **DC Volt-meter**	**TP-91 (B1)** **TP-E (⏚)**		1. Receive a whole black signal. 2. Connect a DC voltmeter to TP-91(B1) and TP-E (⏚). 3. Make sure that the voltage is DC114.5V±1.5V.

FOCUS ADJUSTMENT

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of FOCUS	**Signal generator**		**FOCUS VR** **[In HVT]**	1. Receive a cross-hatch signal. 2. While watching the screen, adjust the FOCUS VR to make the vertical and horizontal lines as fine and sharp as possible. 3. Make sure that when the screen is darkened, the lines remain in good focus.

IF CIRCUIT ADJUSTMENT

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of VCO(CW)	**Signal generator** **Remote control unit**		**1. VCO**	●Please use signal generator which is correct proof about the sending frequency. 1. Receive the PAL full colour bar (210.25MHz) signal. 2. Select 1.IF from the **SERVICE MENU**. 3. Press 1 key and select **1.VCO**. 4. Select **VCO ADJUST** with **MENU ▲/▼** key. 5. Press **MENU** -/+ key until the colour of the characters TOO HIGH changes blue to yellow. Then gradually press the **MENU** -/+ key until the TOO LOW changes yellow. At this time, confirm that the value of **VCO ADJUST** is near +00. 6. Select **AFT ADJUST** with **MENU ▲/▼** key. 7. Press **MENU** -/+ key until the characters JUST REFERENCE changes blue to yellow. 8. Press the **DISPLAY** key three times to return to normal screen.

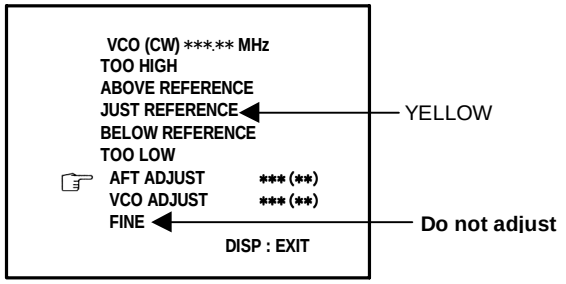

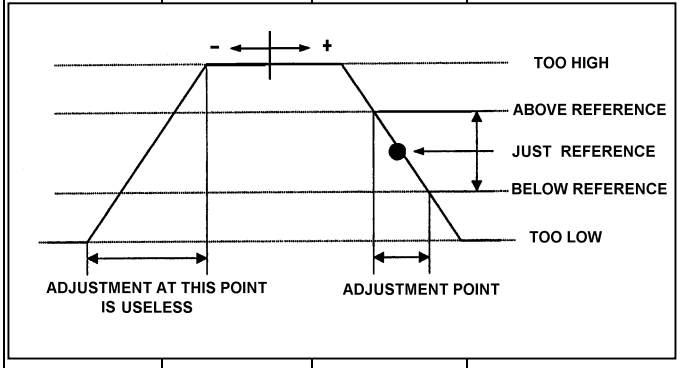

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of DELAY POINT (AGC)	**Signal generator** **Remote control unit**		**DELAY POINT (AGC TAKE-OVER)**	1. Receive a black and white signal (colour off). 2. Select **1. IF** from the SERVICE MENU. 3. Select **2. DELAY POINT** by pressing the **2** key on the remote control unit. 4. Adjust the MENU - or + key until video noise disappears. 5. Turn to other channels and make sure that there are no irregularities.

DELAY POINT (AGC TAKE OVER)	Initial setting value
NTSC 3.58	48
OTHER	43

VIDEO / CHROMA CIRCUIT ADJUSTMENT

The setting (adjustment) using the REMOTE CONTROL UNIT is made on the basis of the initial setting values.
The setting values which adjust the screen to the optimum condition can be different from the initial setting values.
Do not change the initial setting values of the setting items not listed in "ADJUSTMENT".

Setting item \ Colour system		Initial setting value			
		PAL	SECAM	NTSC 3.58	NTSC 4.43
1. CUT OFF	RED	-50			
	GREEN	-50			
	BLUE	-50			
2. DRIVE	RED	+0			
	BLUE	+0			
3. BRIGHT		+0			
4. CONT.		+0			
5. COLOUR		+0	+0	+0	+0
6. TINT	TV	———	———	———	———
	VIDEO	———	———	+0	(+0)
7. SECAM BL ADJUST		+0			
8. SHARP (Do not adjust)	TV	-15		———	
	VIDEO	+5		+5	

( ) : OFF set value

<table>
<tr><th>Item</th><th>Measuring instrument</th><th>Test point</th><th>Adjustment part</th><th>Description</th></tr>
<tr><td>Adjustment of WHITE BALANCE (Low light)</td><td>Signal generator

Remote control unit</td><td></td><td>1. CUT OFF (R)
CUT OFF (G)
CUT OFF (B)

SCREEN VR
[IN HVT]</td><td>1. Receive a black and white signal (colour off).
2. From the SERVICE MENU, select 2. V/C to display 1. CUT OFF (R), (G) and (B) .
3. Set each value to initial setting value with 4～9 keys of the remote control unit.
4. Press the 1 key of the remote control unit to show the single horizontal line on screen.
5. Turn the SCREEN VR fully counter-clockwise, then slowly turn it clockwise to where one of a red, blue or green colour is faintly visible.
6. Use keys 4～9 of the remote control unit and adjust the other 2 colours which except the appeared colour to where the single horizontal line appears white.
7. Turn the SCREEN VR to where the single horizontal line glows faintly.
8. Press the 2 key to turn off the single horizontal line.
9. Press the DISPLAY key twice to return to the normal screen.</td></tr>
<tr><td colspan="4"> 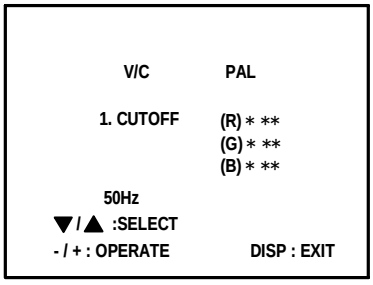
</td><td></td></tr>
<tr><td colspan="4">KEY ASSIGNMENT OF REMOTE CONTROL UNIT
 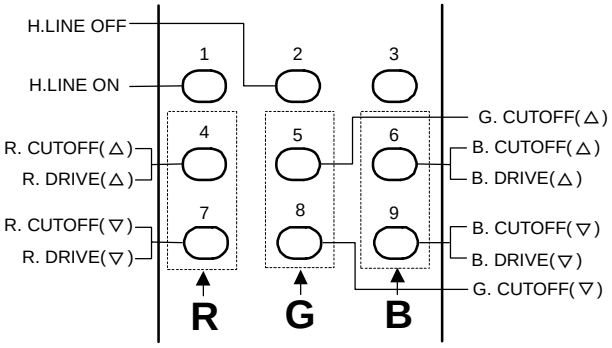
</td><td>
<table>
<tr><th>Adjustment item</th><th></th><th>Variable range</th><th>Initial setting value</th></tr>
<tr><td rowspan="3">1. CUT OFF</td><td>R</td><td>-128～+127</td><td>-50</td></tr>
<tr><td>G</td><td>-128～+127</td><td>-50</td></tr>
<tr><td>B</td><td>-128～+127</td><td>-50</td></tr>
</table>
</td></tr>
<tr><td>Adjustment of WHITE BALANCE (High light)</td><td>Signal generator

Remote control unit</td><td></td><td>2. DRIVE (R)
DRIVE (B)</td><td>1. Receive a black and white signal (colour off).
2. Select 2. V/C from the SERVICE MENU.
3. Select 2. DRIVE (R) / (B) with MENU ▼/▲ key, and set each value to initial setting value with 4 and 7 or 6 and 9 keys of the remote control unit.
4. Use the keys 4 and 7 or 6 and 9 to produce a white screen
5. Press the DISPLAY key twice to return to the nomal screen.</td></tr>
<tr><td colspan="4"> 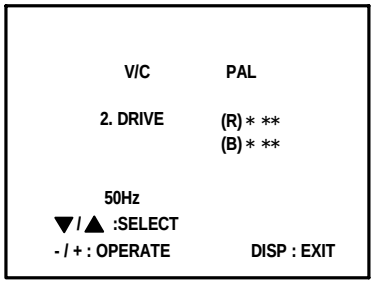
</td><td></td></tr>
<tr><td colspan="4"></td><td>
<table>
<tr><th>Adjustment item</th><th></th><th>Variable range</th><th>Initial setting value</th></tr>
<tr><td rowspan="2">2. DRIVE</td><td>R</td><td>-64～+63</td><td>+0</td></tr>
<tr><td>B</td><td>-64～+63</td><td>+0</td></tr>
</table>
</td></tr>
</table>

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of SUB BRIGHT	**Remote control unit**		**3. BRIGHT**	1. Receive any broadcast. 2. Select **2. V/C** from SERVICE MENU. 3. Select **3. BRIGHT** with the MENU ▼/▲key. 4. Set the initial setting value with the MENU - or + key. 5. If the brightness is not the best with the initial set value, make fine adjustment until you get the best brightness.
Adjustment of SUB CONT.	**Remote control unit**		**4. CONT.**	1. Receive any broadcast. 2. Select **2. V/C** from SERVICE MENU. 3. Select **4. CONT**. with the MENU ▼/▲key. 4. Set the initial setting value with the MENU - or + key. 5. If the contrast is not the best with the initial set value, make fine adjustment until you get the best contrast.
Adjustment of SUB COLOUR Ⅰ	**Remote control unit**		**5. COLOUR**	**[Method of adjustment without measuring instrument]**
			PAL COLOUR	1. Receive a PAL broadcast. 2. Select **2. V/C** from the SERVICE MENU. 3. Select **5. COLOUR** with the MENU ▼/▲ key. 4. Set the initial setting value for PAL COLOUR with the MENU - or + key. 5. If the colour is not the best with the initial set value, make fine adjustment until you get the best colour.
			SECAM COLOUR	1. Receive a SECAM broadcast. 2. Make fine adjustment of SECAM COLOUR as previously.
			NTSC 3.58 COLOUR	1. Input a NTSC 3.58 full field colour bar signal (75% white). 2. Make similar fine adjustment of NTSC 3.58 COLOUR as previously.
			NTSC 4.43 COLOUR	When NTSC 3.58 adjustment completed, NTSC 4.43 will be automatically set at the respective values.

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of SUB COLOUR Ⅱ	**Signal generator** **Oscillo-scope** **Remote control unit**	**TP-47R/G** **TP-E (⏚)** **[CRT SOCKET PWB]**	**5. COLOUR**	**[Method of adjustment using measuring instrument]**
			PAL COLOUR	1. Receive a PAL full field colour bar signal (75% white). 2. Select **2. V/C** from SERVICE MENU. 3. Select **5. COLOUR** with the MENU ▼/▲ key. 4. Set the initial setting value of PAL COLOUR with the MENU - or + key. 5. Connect the oscilloscope between TP-47R/G and TP-E. 6. Adjust PAL COLOUR to bring the value of **(A)** in the illustration to **+9V (W&G)**.
			SECAM COLOUR	1. Receive a SECAM full field colour bar signal (75% white). 2. Set the initial setting value of SECAM COLOUR with the MENU - or + key. 3. Adjust SECAM COLOUR to bring the value of **(A)** in the illustration to **+3V (W & G)**.
			NTSC 3.58 COLOUR	1. Input a NTSC 3.58 full field colour bar signal (75% white). 2. Set the initial setting value of NTSC 3.58 COLOUR with the MENU - or + key. 3. Adjust NTSC 3.58 COLOUR to bring the value of **(A)** in the illustration to **+9V (W&G)**.
			NTSC 4.43 COLOUR	When NTSC 3.58 is set, NTSC 4.43 will be automatically set at the respective values.

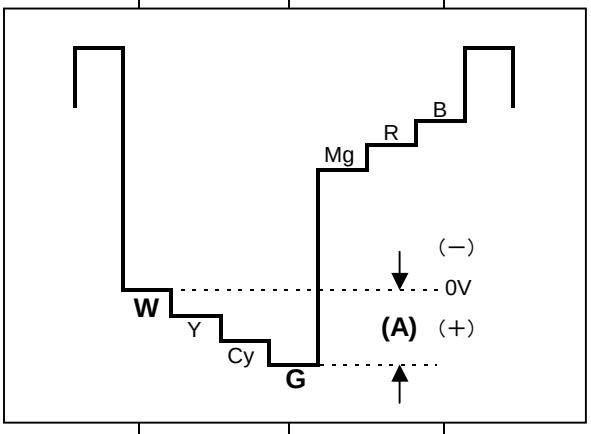

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of TINT Ⅰ	**Signal generator** **Remote control unit**		**6. TINT**	**[Method of adjustment without measuring instrument]**
			NTSC 3.58 TINT	1. Input a NTSC 3.58 full field colour bar signal (75% white). 2. Select **2. V/C** from SERVICE MENU. 3. Select **6. TINT** with the MENU ▼/▲ key. 4. Set the initial setting value of NTSC 3.58 with the MENU - or + key. 5. If you cannot get the best tint with the initial setting value, make fine adjustment until you get the best tint.
			NTSC 4.43 TINT	When NTSC 3.58 is set, NTSC 4.43 will be automatically set at the respective values.
Adjustment of TINT Ⅱ	**Signal generator** **Oscillo-scope** **Remote control unit**	**TP-47R/G** **TP-E (⏚)** **[CRT SOCKET PWB]**	**6. TINT**	**[Method of adjustment using measuring instrument]**
			NTSC 3.58 TINT	1. Input a NTSC 3.58 full field colour bar signal (75% white). 2. Select **2. V/C** from SERVICE MENU. 3. Select **6. TINT** with the MENU ▼/▲ key. 4. Set the initial setting value of NTSC 3.58 with the MENU - or + key. 5. Connect the oscilloscope between TP-47R/G and TP-E. 6. Adjust NTSC 3.58 TINT to bring the value of **(B)** in the illustration to **+7V (W&Cy)**.
			NTSC 4.43 TINT	When NTSC 3.58 is set, NTSC 4.43 will be automatically set at the respective values.

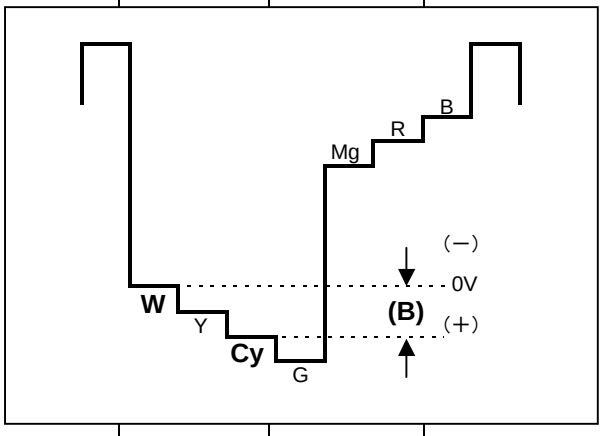

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of SECAM BLACK OFFSET	**Remote control unit** **Signal generator**		**7.SECAM BL ADJUST**	1. Receive a SECAM full field colour bar signal. 2. Select **2. V/C** from SERVICE MENU. 3. Select **7. SECAM BL ADJUST** with ▼/▲MENU key. 4. Set the initial setting value with the – or + MENU key. 5. Switch the ①key (colour OFF) and ②key (colour ON) on the remote control and make sure that there is no colour on the black and white screen. 6. If the black and white screen is not best with the initial setting value, make fine adjustment until you get the best black and white screen. 7. Press the DISPLAY key twice to return to the normal screen.

KEY ASSIGNMENT OF REMOTE CONTROL UNIT

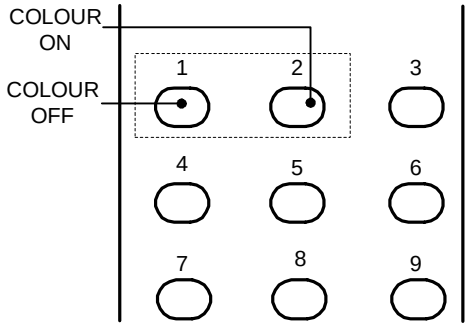

DEFLECTION CIRCUIT ADJUSTMENT

- There are 2 modes of adjustment (setting value) ------ 50Hz mode and 60Hz mode ----- depending upon the kind of signals (vertical frequency 50Hz / 60Hz).
- When adjusted in 50Hz mode, 60Hz mode will be automatically set.

The setting (adjustment) using the REMOTE CONTROL UNIT is made on the basis of the initial setting values.
The setting values which adjust the screen to the optimum condition can be different from the initial setting values.

Setting item	Initial setting value	
	50Hz MODE	60Hz MODE
1. VER. POSITION	-2	-3
2. HOR. POSITION	+1	+4
3. VER. HEIGHT	-40	+0
4. VER. LINEARITY	+13	-3
5. VER. SCURVE	-32	+0
6. HOR. VCO ADJUST(Do not adjust)	+0	+0

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of V.HEIGHT &V. POSITION	**Signal generator** **Remote control unit**		**1. VER. POSITION** **3. VER. HEIGHT**	**[fv : 50Hz mode]** 1. Receive a circle pattern signal 2. Select **3. DEF.** from SERVICE MENU. 3. Select **1. VER. POSITION** with the MENU ▼/▲ key. 4. Set the initial setting value with the MENU - / + key. 5. Adjust **1. VER. POSITION** to make **V=V"** as shown in Fig.1, with the MENU - / + key. 6. Receive a cross-hatch signal. 7. Select **3. V. HEIGHT** with the MENU ▼/▲ key. 8. Set the initial setting value with the MENU - / + key. 9. As shown in Fig.2, adjust **3. VER. HEIGHT** and make the vertical screen size **92%** of the picture size with the MENU - / + keys of remote control unit.

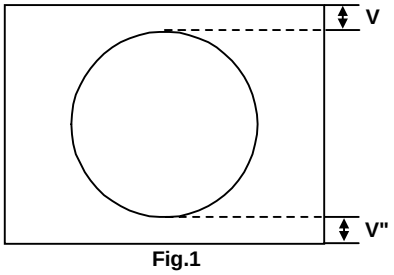

Fig.1

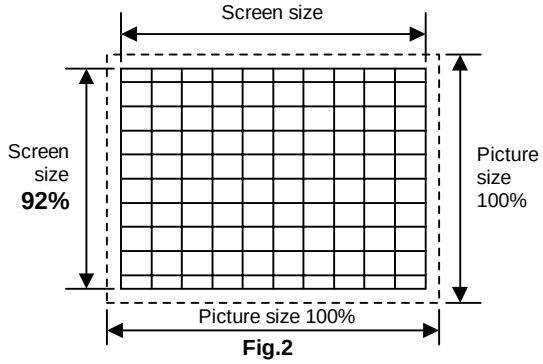

Fig.2

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of HOR. POSITION	**Signal generator** **Remote control unit**		**2. HOR. POSITION**	10. Receive a circle pattern signal. 11. Select **2. HOR POSITION** with the MENU ▼/▲ key. 12. Set the initial setting value of **2. HOR. POSITION** with the MENU - / + key. 13. Adjust **2. HOR. POSITION** to make **H=H"** as shown in Fig.3 with the MENU - / + key.
Adjustment of VER. LIN. & VER. SCURVE	**Signal generator** **Remote control unit**		**4. VER. LINEARITY** **5. VER. SCURVE**	● **When the vertical linearity has been deteriorated remarkably, perform the following steps.** 14. Receive a cross-hatch signal. 15. Select **4. VER. LINEARITY** with the MENU ▼/▲ key. 16. Set the initial setting value of **4. VER LINEARITY** with the MENU - / + key. 17. Select **5. VER. SCURVE** with the MENU ▼/▲ key. 18. Set the initial setting value of **5. VER. SCURVE** with the MENU - / + key. 19. Adjust **4. VER. LINEARITY** and **5. VER. SCURVE** so that the spaces of each line as shown in Fig.4 on **TOP**, **CENTER** and **BOTTOM** become uniform. 20. Make sure that the adjustment is properly done on the screen of 60Hz mode. **[NOTE]** ● Adjust to make both 50Hz & 60Hz are the same v. size and fine straight line. ● When adjust again, adjust 50Hz mode first. ● When adjust in 60Hz mode, only 60Hz mode is adjust.

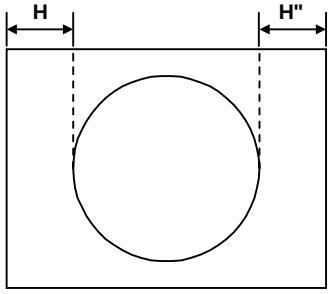

Fig.3

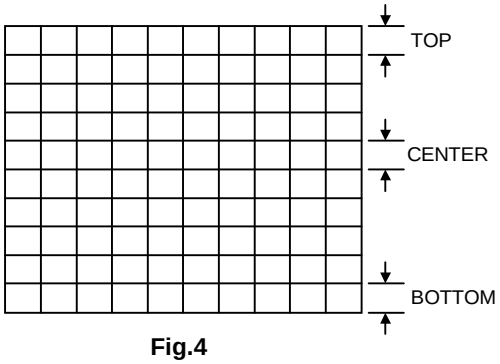

Fig.4

VSM PRESET ADJUSTMENT

Item	Measuring instrument	Test point	Adjustment part	Description
Setting of VSM PRESET	**Remote control unit**		**TINT** **COLOUR** **BRIGHT** **CONT.** **SHARP**	1. Select **4. VSM PRESET** from the SERVICE MENU. 2. Select BRIGHT with the PICTURE MODE key. 3. Adjust the MENU ▼/▲ and MENU - or + key to bring the set values of **TINT ～ SHARP** to the values shown in the table. 4. Respectively select the VSM PRESET mode for STANDARD and SOFT, and make similar adjustment as in 3 above.

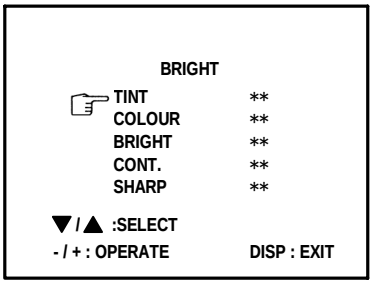

VSM preset mode / VSM Setting item	SETTING VALUE		
	BRIGHT	STANDARD	SOFT
TINT	15	←	←
COLOUR	15	←	←
BRIGHT	15	←	←
CONT.	30	15	11
SHARP	15	←	12

SETTING VALUE OF VSM PRESET

PRESET ADJUSTMENT (Do not adjust)

- **The items in the following table, it is no requirement for adjustment.**
- **If values had changed by the miss operation, set the initial setting values in the following table.**

Setting item		Initial setting value			
		PAL	SECAM	NTSC 3.58	NTSC 4.43
1. C-TRAP FIX		0	←	←	←
2. SHARP PEAK		0	←	←	←
3. ABL		1	←	←	←
4. GAMMA		0	←	←	←
5. Y. DELAY TIME	TV	0	2	—	—
	VIDEO	0	2	0	2
6. BLACK EXP START		3	←	←	←
7. C-BPF	TV	1	←	—	—
	VIDEO	1	←	←	←
8. CW / SCP		0	←	←	←
9. VIF DET LEVEL		+0	←	←	←
11. IF AGC MIN		0	←	←	←
12. VIF AGC		0	←	←	←
13. VIF PMOD		0	←	←	←
19. VNR		15	←	←	←
20. RGB LIM		1	←	←	←
21. RGB LIMIT LEVEL		2	←	←	←
23. TEXT H. POSITION		-3	←	←	←
24. READ DATA		———	———	———	———

Setting item	B/G	I	D/K
10. SIF DET LEVEL	+0	←	←
14. SIF BPF BW ADJUST	+0	←	←
15. SIF TRAP FO ADJUST	+0	←	←
16. SIF TRAP FO ADJUST 2	+0	←	←
17. SIF -TRAP	0	←	←
18. SIF -BPF	0	←	←
22. SIF SW	1	←	←

PURITY / CONVERGENCE ADJUSTMENT

PURITY ADJUSTMENT

1. Demagnetize CRT with the demagnetizer.
2. Loosen the retainer screw of the deflection yoke.
3. Remove the wedges.
4. Input a green raster signal from the signal generator, and turn the screen to green raster.
5. Move the deflection yoke backward.
6. Bring the long lug of the purity magnets on the short lug and position them horizontally. (Fig.2)
7. Adjust the gap between two lugs so that the GREEN RASTER will come into the center of the screen. (Fig.3)
8. Move the deflection yoke forward, and fix the position of the deflection yoke so that the whole screen will become green.
9. Insert the wedge to the top side of the deflection yoke so that it will not move.
10. Input a crosshatch signal.
11. Verify that the screen is horizontal.
12. Input red and blue raster signals, and make sure that purity is properly adjusted.

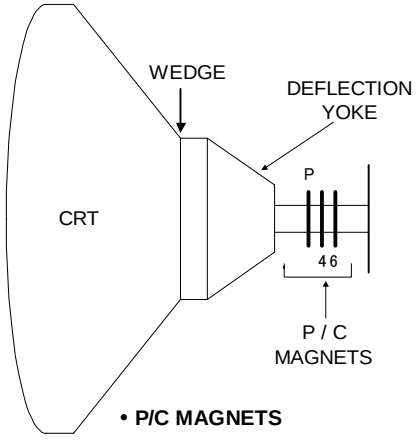

• P/C MAGNETS

P : PURITY MAGNET
4 : 4 POLES (convergence magnets)
6 : 6 POLES (convergence magnets)

Fig.1

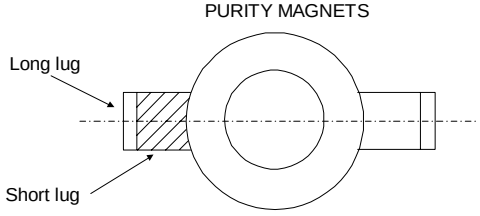

Bring the long lug over the short lug and position them horizontally.

Fig.2

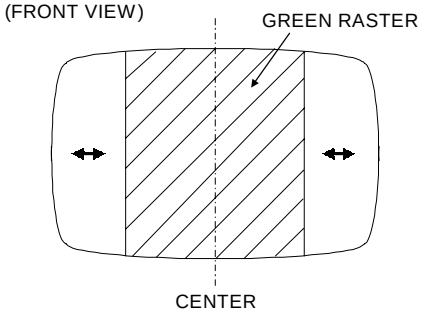

Fig.3

STATIC CONVERGENCE ADJUSTMENT

1. Input a crosshatch signal.
2. Using 4-pole convergence magnets, overlap the red and blue lines in the center of the screen (Fig.1) and turn them to magenta (red/blue).
3. Using 6-pole convergence magnets, overlap the magenta(red/blue) and green lines in the center of the screen and turn them to white.
4. Repeat 2 and 3 above, and make best convergence.

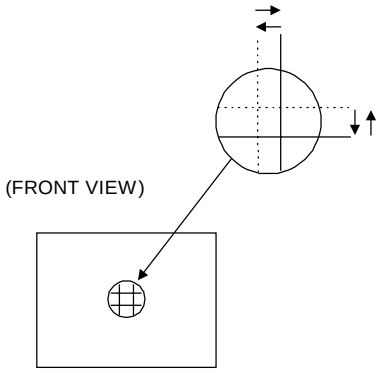

Fig.1

DYNAMIC CONVERGENCE ADJUSTMENT

1. Move the deflection yoke up and down and overlap the lines in the periphery. (Fig. 2)
2. Move the deflection yoke left to right and overlap the lines in the periphery. (Fig. 3)
3. Repeat 1 and 2 above, and make best convergence.

(FRONT VIEW)

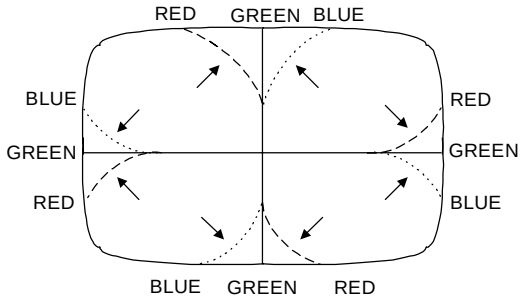

Fig.2

● After adjustment, fix the wedge at the original position.
Fasten the retainer screw of the deflection yoke.
Fix the 6 magnets with glue.

(FRONT VIEW)

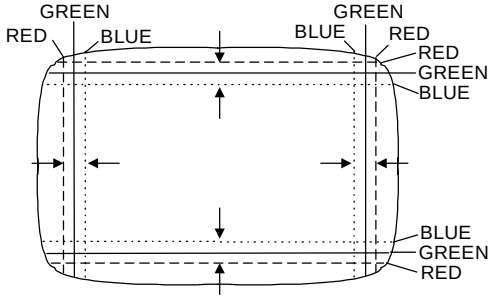

Fig.3

SELF CHECK FUNCTIONS

1. Outline

This model has self check functions given below. When an abnormality has been detected, the SUB POWER is turned OFF and the LED flashes to inform of the failure. An abnormality is detected by the signal input state of the control line connected to the microcomputer.

2. Self check items

Check item	Details of detection	Method of detection	State of abnormality
Over-current protection	An over-current on the B1 line is detected.	The main microcomputer detects the possible abnormality at 20-msecond intervals and judges the results in every 24 time. Of the 24 times, if NG is detected more than 13 times, it is judged that there is an abnormality	When an abnormality has been detected, the SUB-POWER is turned off. While the SUB-POWER is being turned off, the power key of the remote controller is not operational until the power plug is taken out and put in again.
CRT NECK protection	Operation of CRT NECK protection circuit.	DITTO	DITTO

3. Self check indicating function

When an abnormality has been detected at about 3seconds after the power is turned on, the SUB POWER is turned off immediately and the ON TIMER LED flashes.

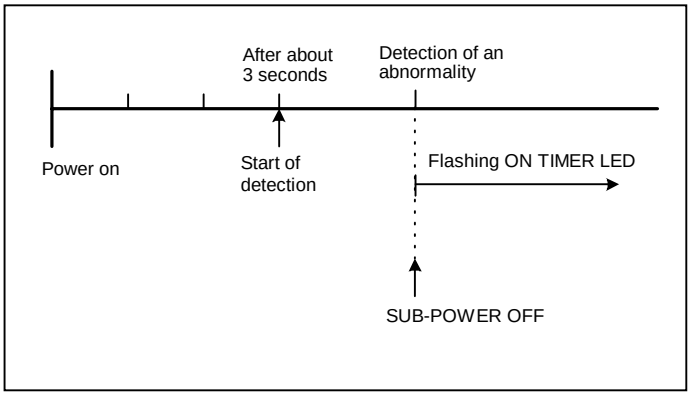

[Indication by ON TIMER LED]

Item	LED flashing intervals
Over-current protection and CRT NECK protection	At 0.24-second intervals

REPLACEMENT OF CHIP COMPONENT

■ CAUTIONS

1. Avoid heating for more than 3 seconds.
2. Do not rub the electrodes and the resist parts of the pattern.
3. When removing a chip part, melt the solder adequately.
4. Do not reuse a chip part after removing it.

■ SOLDERING IRON

1. Use a high insulation soldering iron with a thin pointed end of it.
2. A 30w soldering iron is recommended for easily removing parts.

■ REPLACEMENT STEPS

1. How to remove Chip parts

◆ **Resistors, capacitors, etc.**

(1) As shown in the figure, push the part with tweezers and alternately melt the solder at each end.

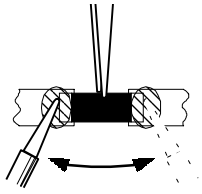

(2) Shift with tweezers and remove the chip part.

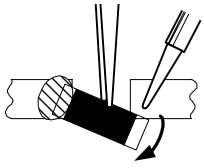

◆ **Transistors, diodes, variable resistors, etc.**

(1) Apply extra solder to each lead.



(2) As shown in the figure, push the part with tweezers and alternately melt the solder at each lead. Shift and remove the chip part.

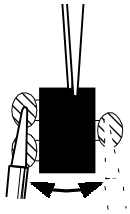

Note : After removing the part, remove remaining solder from the pattern.

2. How to install Chip parts

◆ **Resistors, capacitors, etc.**

(1) Apply solder to the pattern as indicated in the figure.

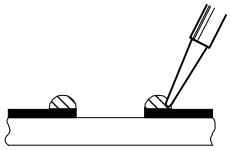

(2) Grasp the chip part with tweezers and place it on the solder. Then heat and melt the solder at both ends of the chip part.

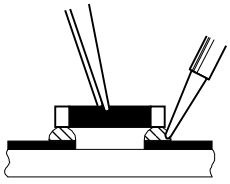

◆ **Transistors, diodes, variable resistors, etc.**

(1) Apply solder to the pattern as indicated in the figure.

(2) Grasp the chip part with tweezers and place it on the solder.

(3) First solder lead **A** as indicated in the figure.

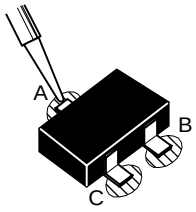

(4) Then solder leads **B** and **C**.

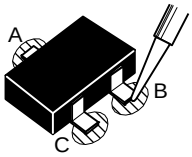

AV-14FTR STANDARD CIRCUIT DIAGRAM

■ NOTE ON USING CIRCUIT DIAGRAMS

1. SAFETY

The components identified by the⚠ symbol and shading are critical for safety. For continued safety replace safety critical components only with manufactures recommended parts.

2.SPECIFIED VOLTAGE AND WAVEFORM VALUES

The voltage and waveform values have been measured under the following conditions.

(1)Input signal	: Colour bar signal
(2)Setting positions of each knob/button and variable resistor	:Original setting position when shipped
(3)Internal resistance of tester	:DC 20kΩ/V
(4)Oscilloscope sweeping time	:H ⇒ 20μS/div :V ⇒ 5mS/div :Others ⇒ Sweeping time is specified
(5)Voltage values	:All DC voltage values

∗ Since the voltage values of signal circuit vary to some extent according to adjustments, use them as reference values.

3.INDICATION OF PARTS SYMBOL [EXAMPLE]

●In the PW board :R1209→R209

4.INDICATIONS ON THE CIRCUIT DIAGRAM

(1)Resistors

●Resistance value

No unit	:[Ω]
K	:[KΩ]
M	:[MΩ]

●Rated allowable power

No indication	:1/10[W]
Others	:As specified

●Type

No indication	:Carbon resistor
OMR	:Oxide metal film resistor
MFR	:Metal film resistor
MPR	:Metal plate resistor
UNFR	:Uninflammable resistor
FR	:Fusible resistor

*Composition resistor 1/2 [W] is specified as 1/2S or Comp.

(2)Capacitors

●Capacitance value

1 or higher	:[pF]
less than 1	:[μF]

●Withstand voltage

No indication	:DC50[V]
AC indicated	:AC withstand voltage [V]
Others	:DC withstand voltage [V]

*Electrolytic Capacitors

47/50[Example]:Capacitance value [μF]/withstand voltage[V]

●Type

No indication	:Ceramic capacitor
MY	:Mylar capacitor
MM	:Metalized mylar capacitor
PP	:Polypropylene capacitor
MPP	:Metalized polypropylene capacitor
MF	:Metalized film capacitor
TF	:Thin film capacitor
BP	:Bipolar electrolytic capacitor
TAN	:Tantalum capacitor

(3)Coils

No unit	:[μH]
Others	:As specified

(4)Power Supply



:B1
:12V
:9V
:5V

*Respective voltage values are indicated

(5)Test point

:Test point
:Only test point display

(6)Connecting method



:Connector
:Wrapping or soldering
:Receptacle

(7)Ground symbol

:LIVE side ground
:ISOLATED(NEUTRAL) side ground
:EARTH ground
:DIGITAL ground

5.NOTE FOR REPAIRING SERVICE

This model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : (⊥) side GND and the ISOLATED(NEUTRAL) : (⏚) side GND. Therefore, care must be taken for the following points.

(1)Do not touch the LIVE side GND or the LIVE side GND and the ISOLATED(NEUTRAL) side GND simultaneously. If the above caution is not respected, an electric shock may be caused. Therefore, make sure that the power cord is surely removed from the receptacle when, for example, the chassis is pulled out.

(2)Do not short between the LIVE side GND and ISOLATED(NEUTRAL) side GND or never measure with a measuring apparatus (oscilloscope, etc.) the LIVE side GND and ISOLATED(NEUTRAL) side GND at the same time. If the above precaution is not respected , a fuse or any parts will be broken.

◇ **Since the circuit diagram is a standard one, the circuit and circuit constants may be subject to change for improvement without any notice.**

VP0007
DP6054

Jul. 2000 No.51751

CONTENTS

SEMICONDUCTOR SHAPES 2-2

BLOCK DIAGRAM 2-3

CIRCUIT DIAGRAMS

MAIN PWB CIRCUIT DIAGRAMS(Inc. CRT SOCKET PWB) 2-5

PATTERN DIAGRAMS

MAIN PWB PATTERN 2-9

CRT SOCKET PWB PATTERN 2-11

SEMICONDUCTOR SHAPES

TRANSISTOR

BOTTOM VIEW	FRONT VIEW				TOP VIEW
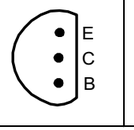					CHIP TR

IC

BOTTOM VIEW	FRONT VIEW			TOP VIEW
				

CHIP IC

TOP VIEW		
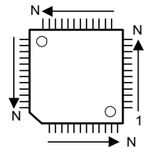	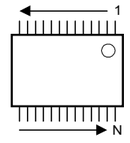	

CRT SOCKET PWB PATTERN*(Within MAIN PWB)*

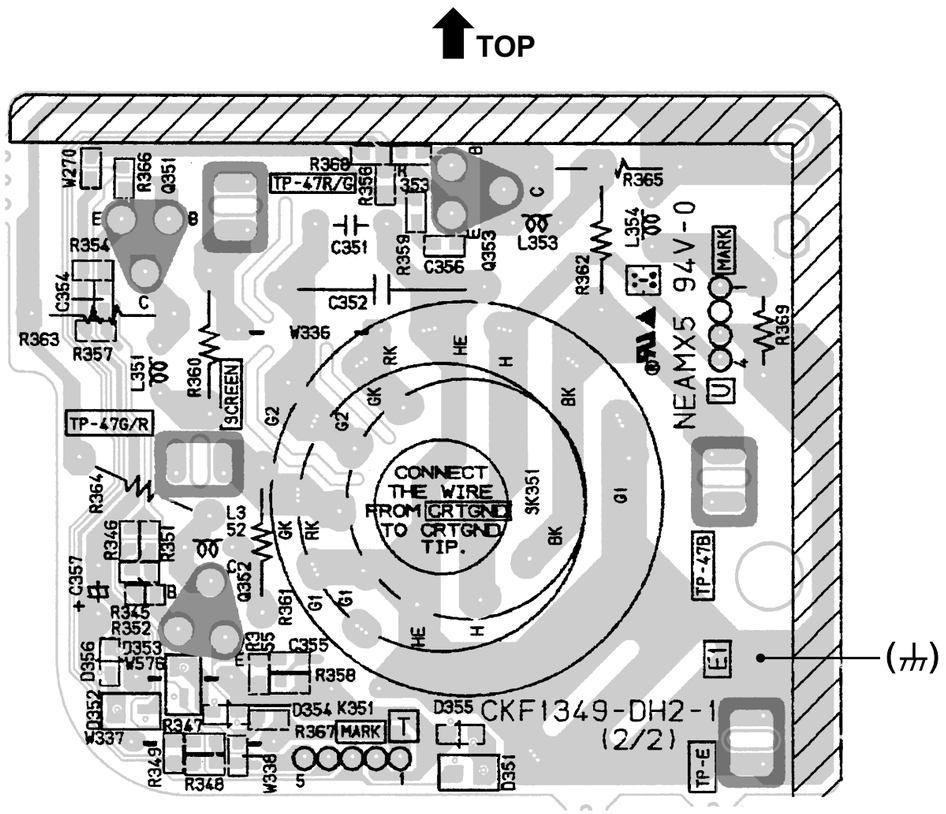

BLOCK DIAGRAM

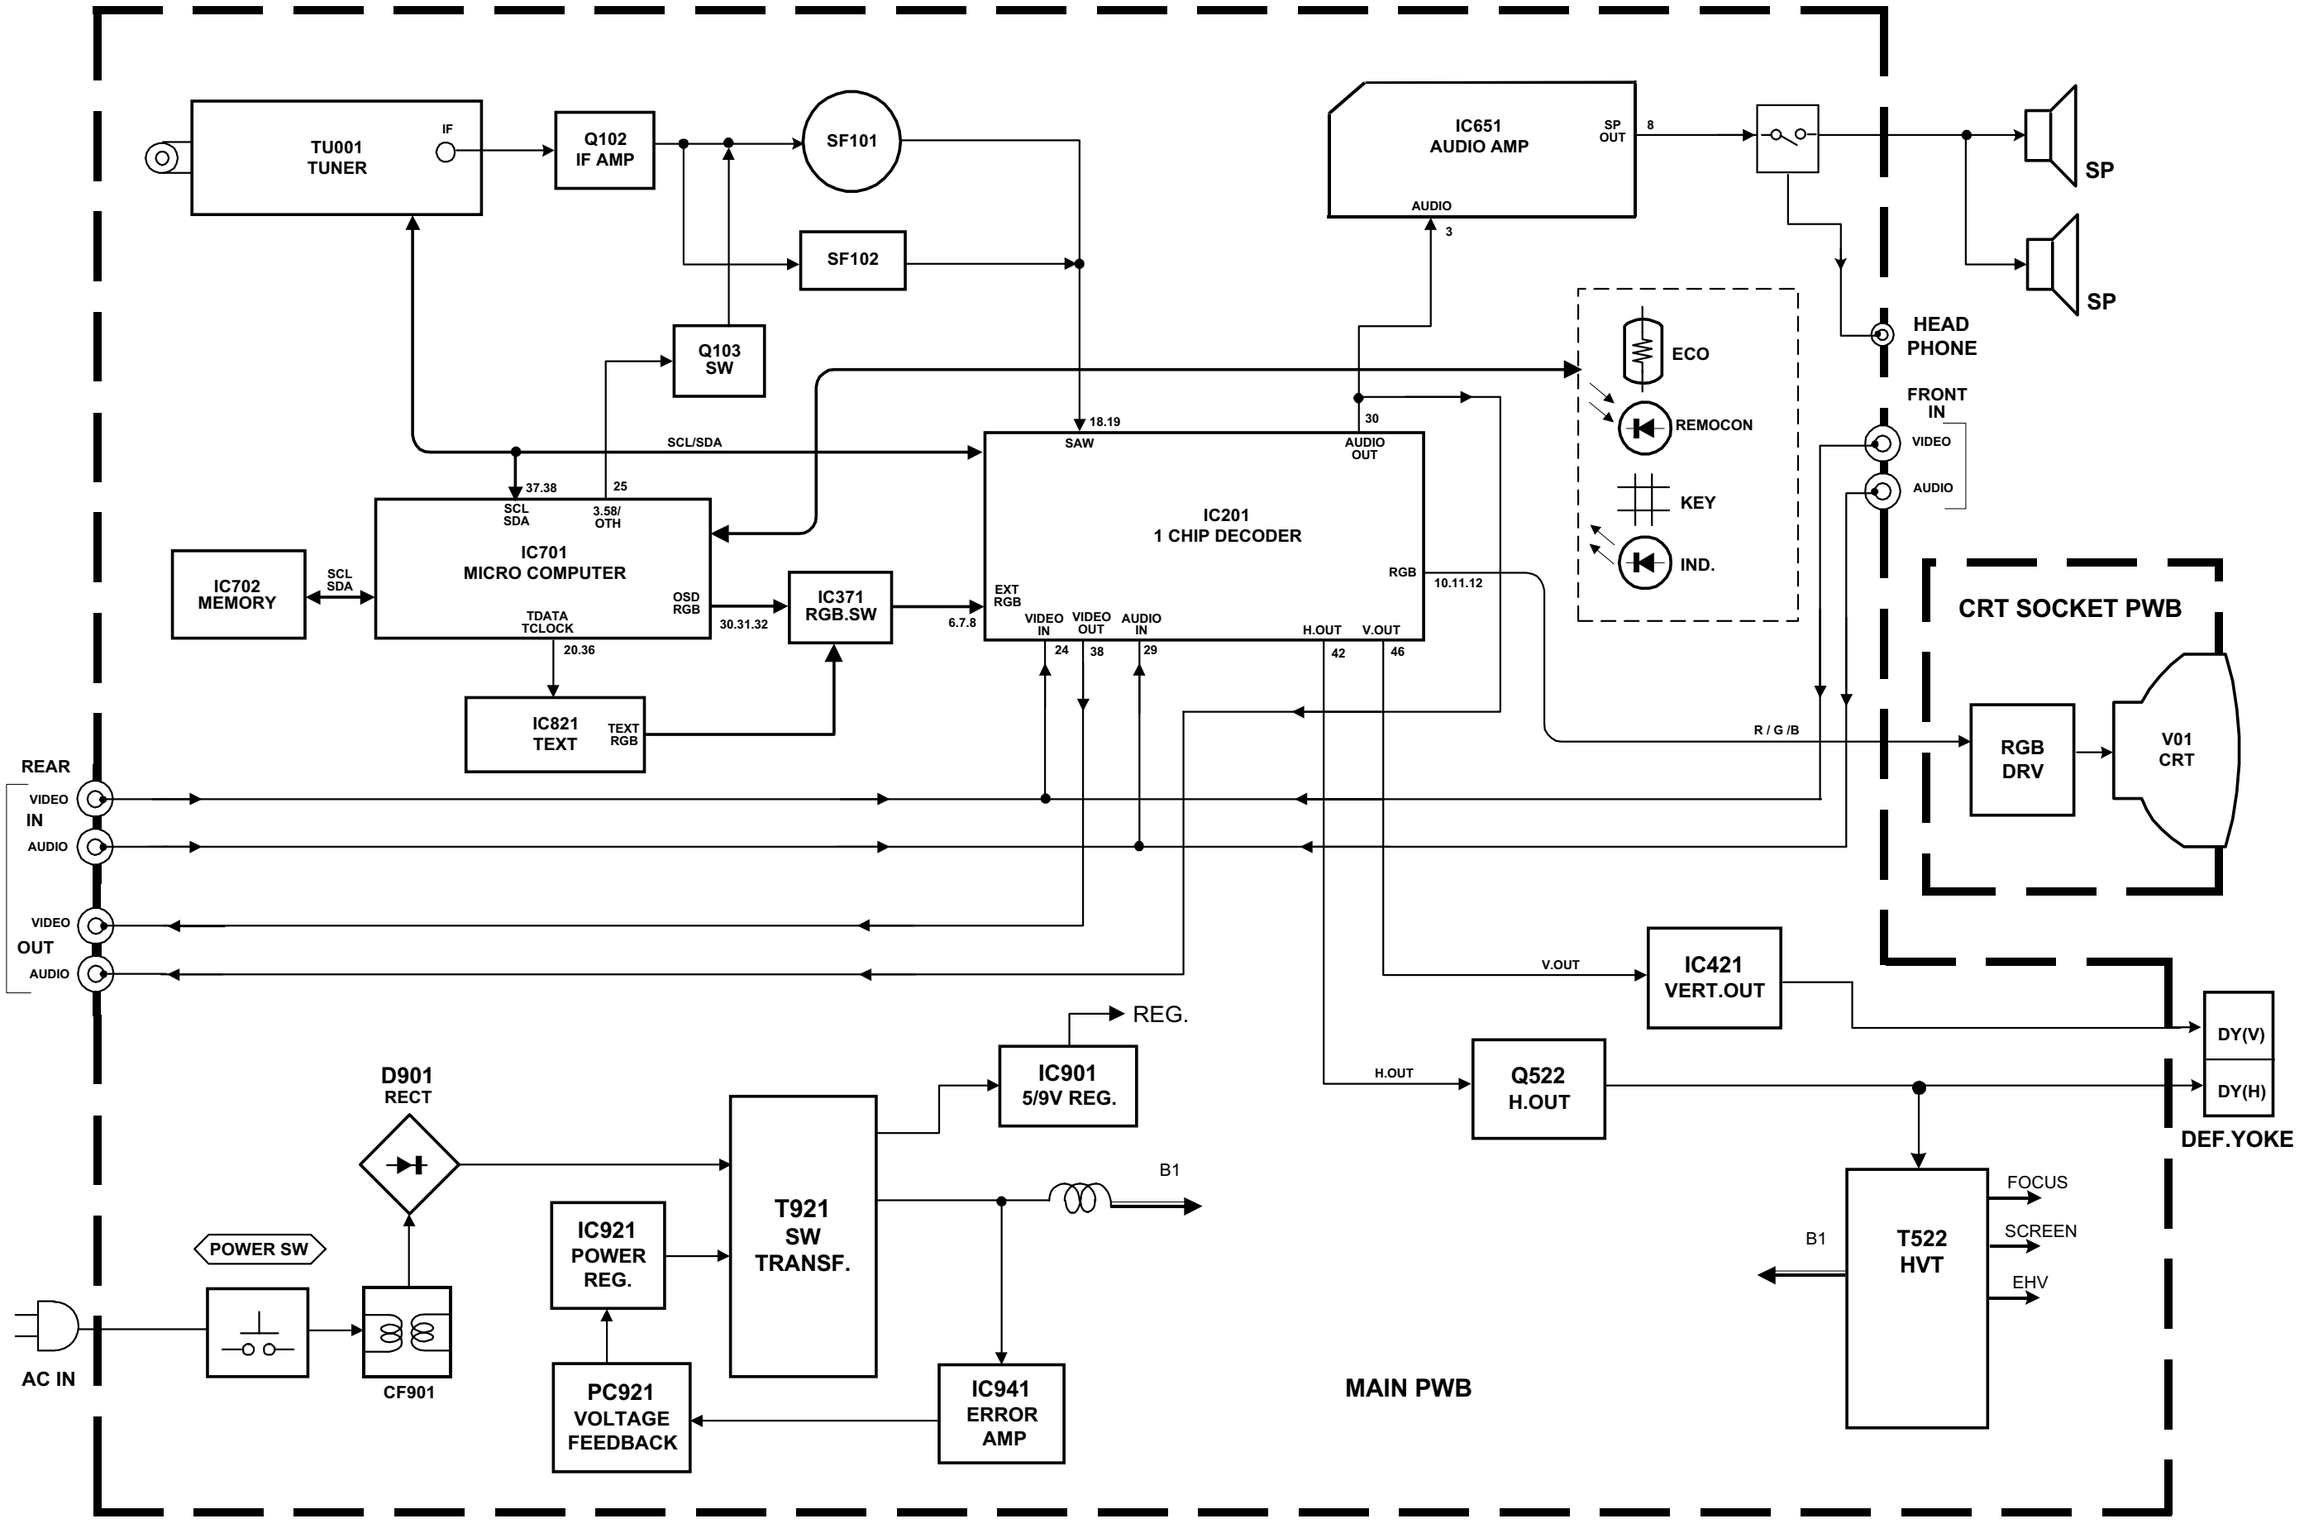

CIRCUIT DIAGRAMS *MAIN PWB CIRCUIT DIAGRAMS* [1/2]

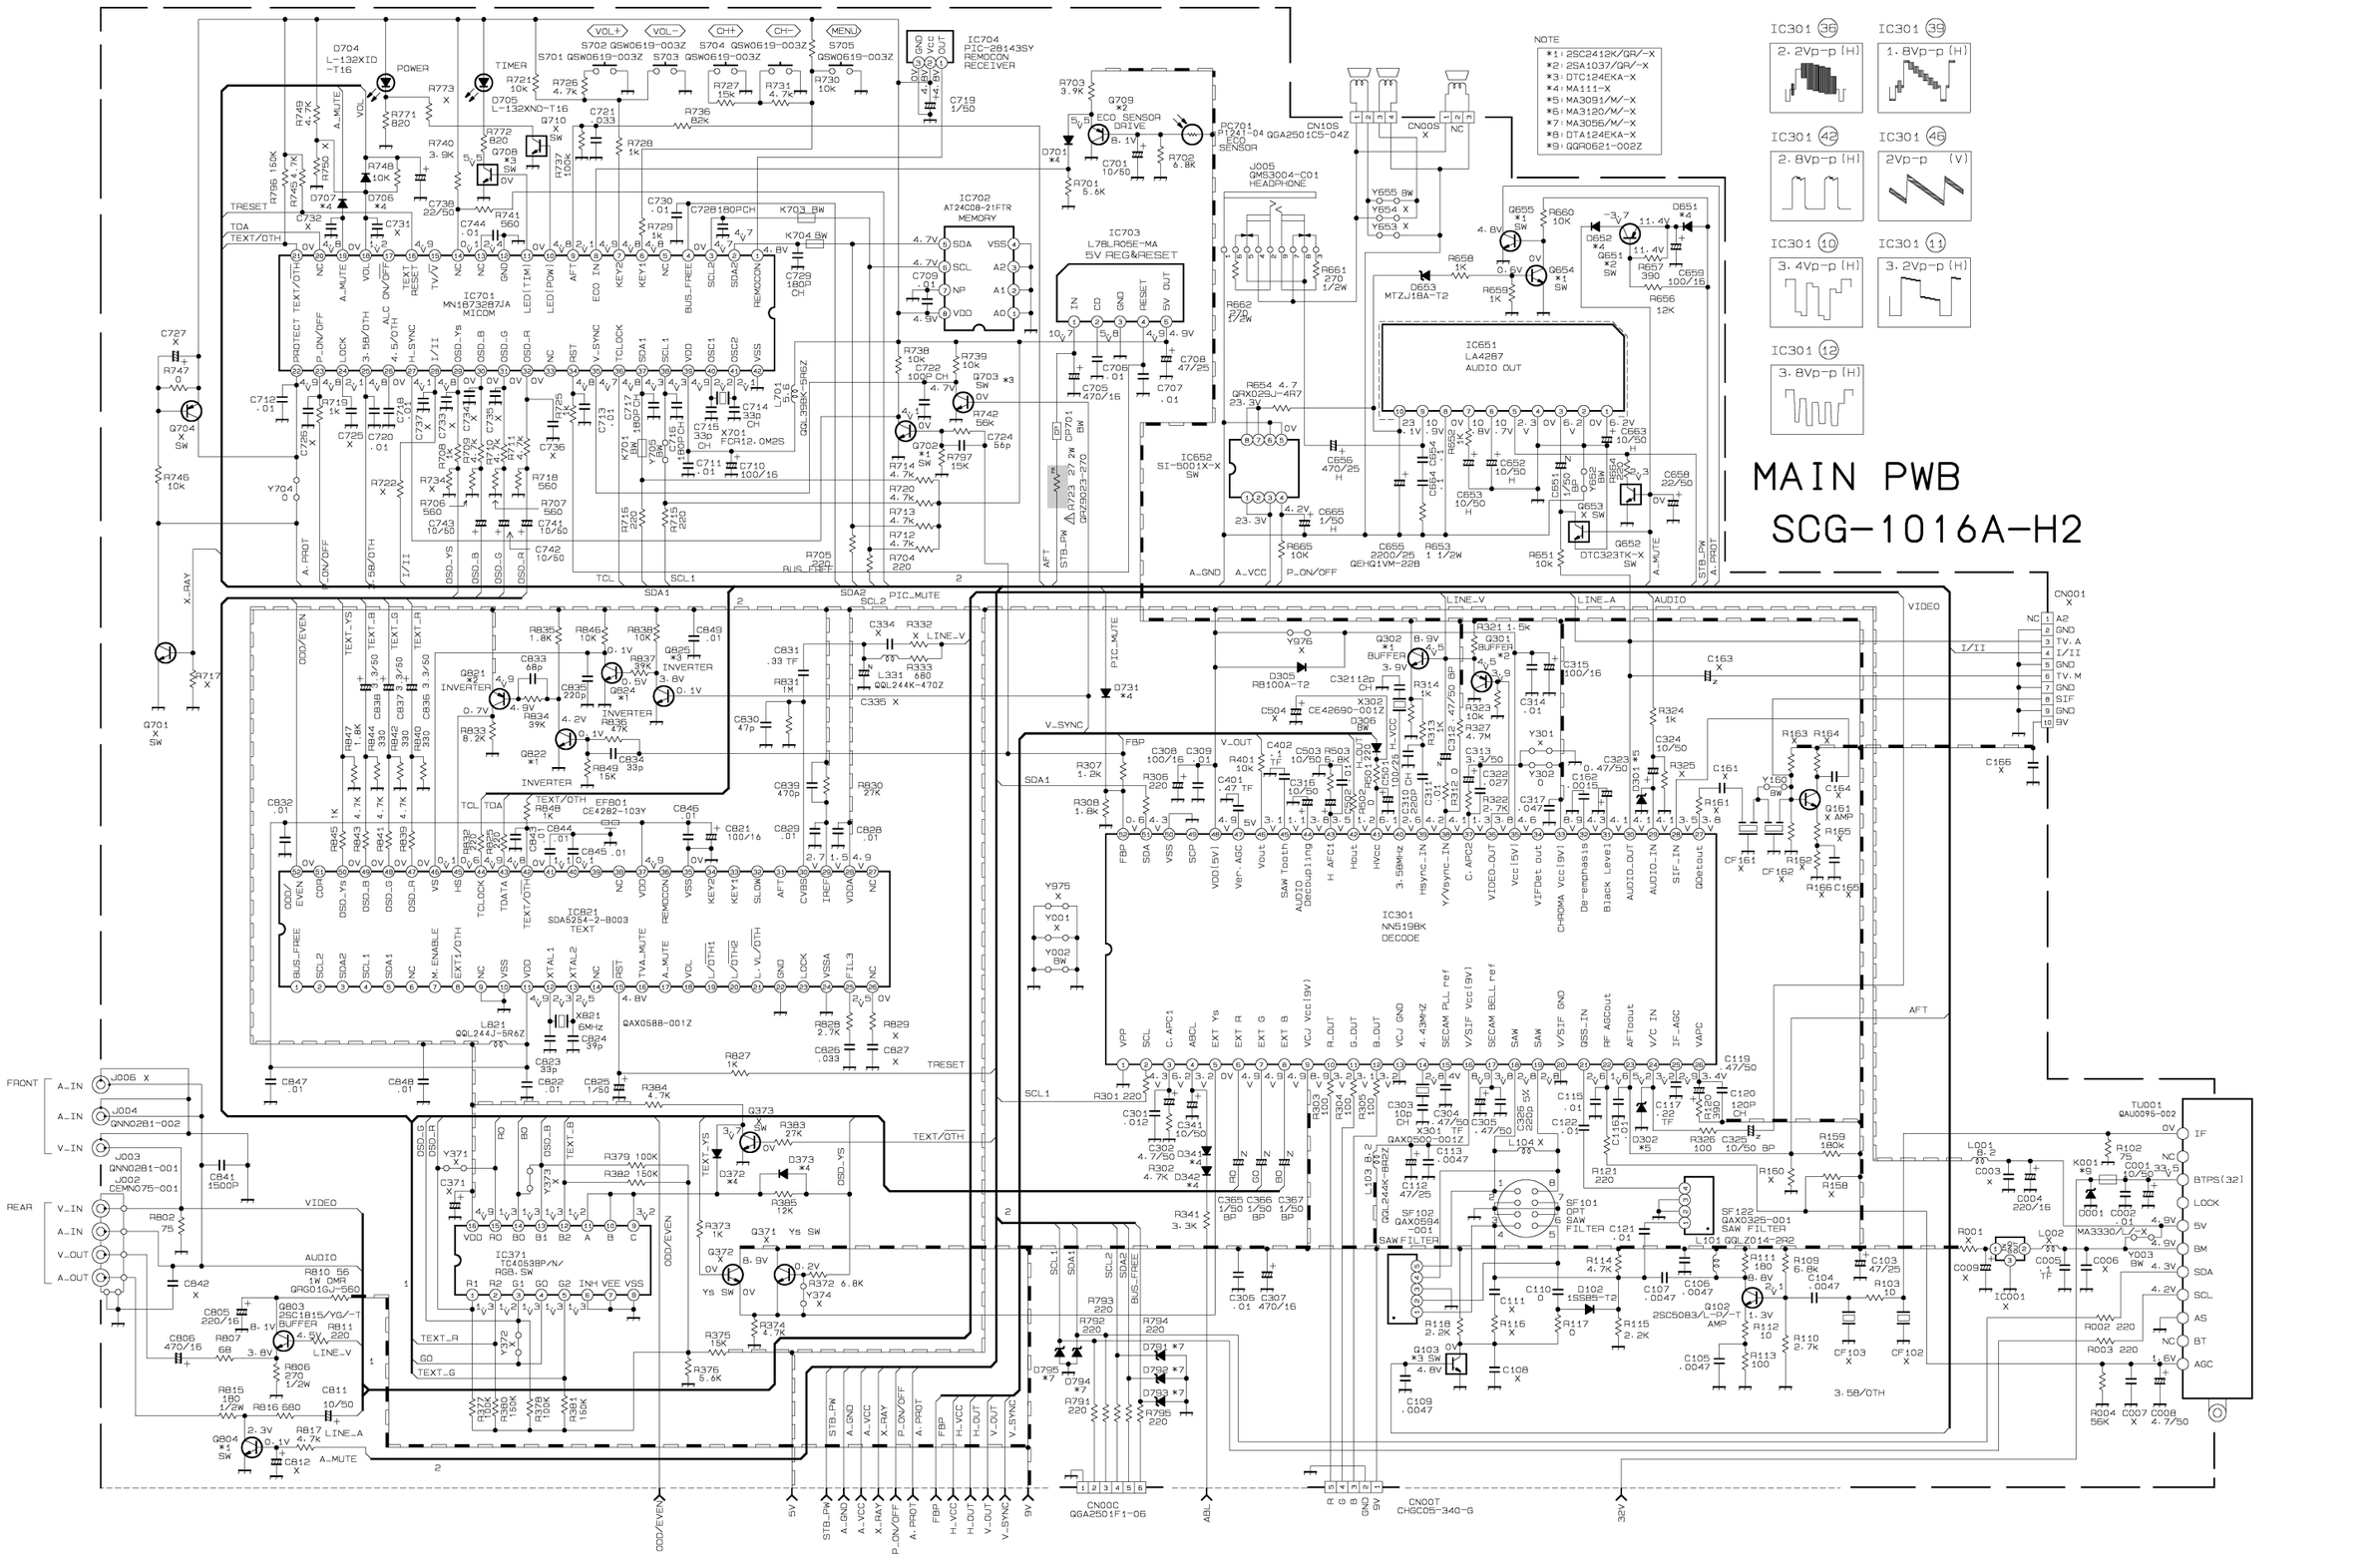

MAIN PWB CIRCUIT DIAGRAM [2/2]

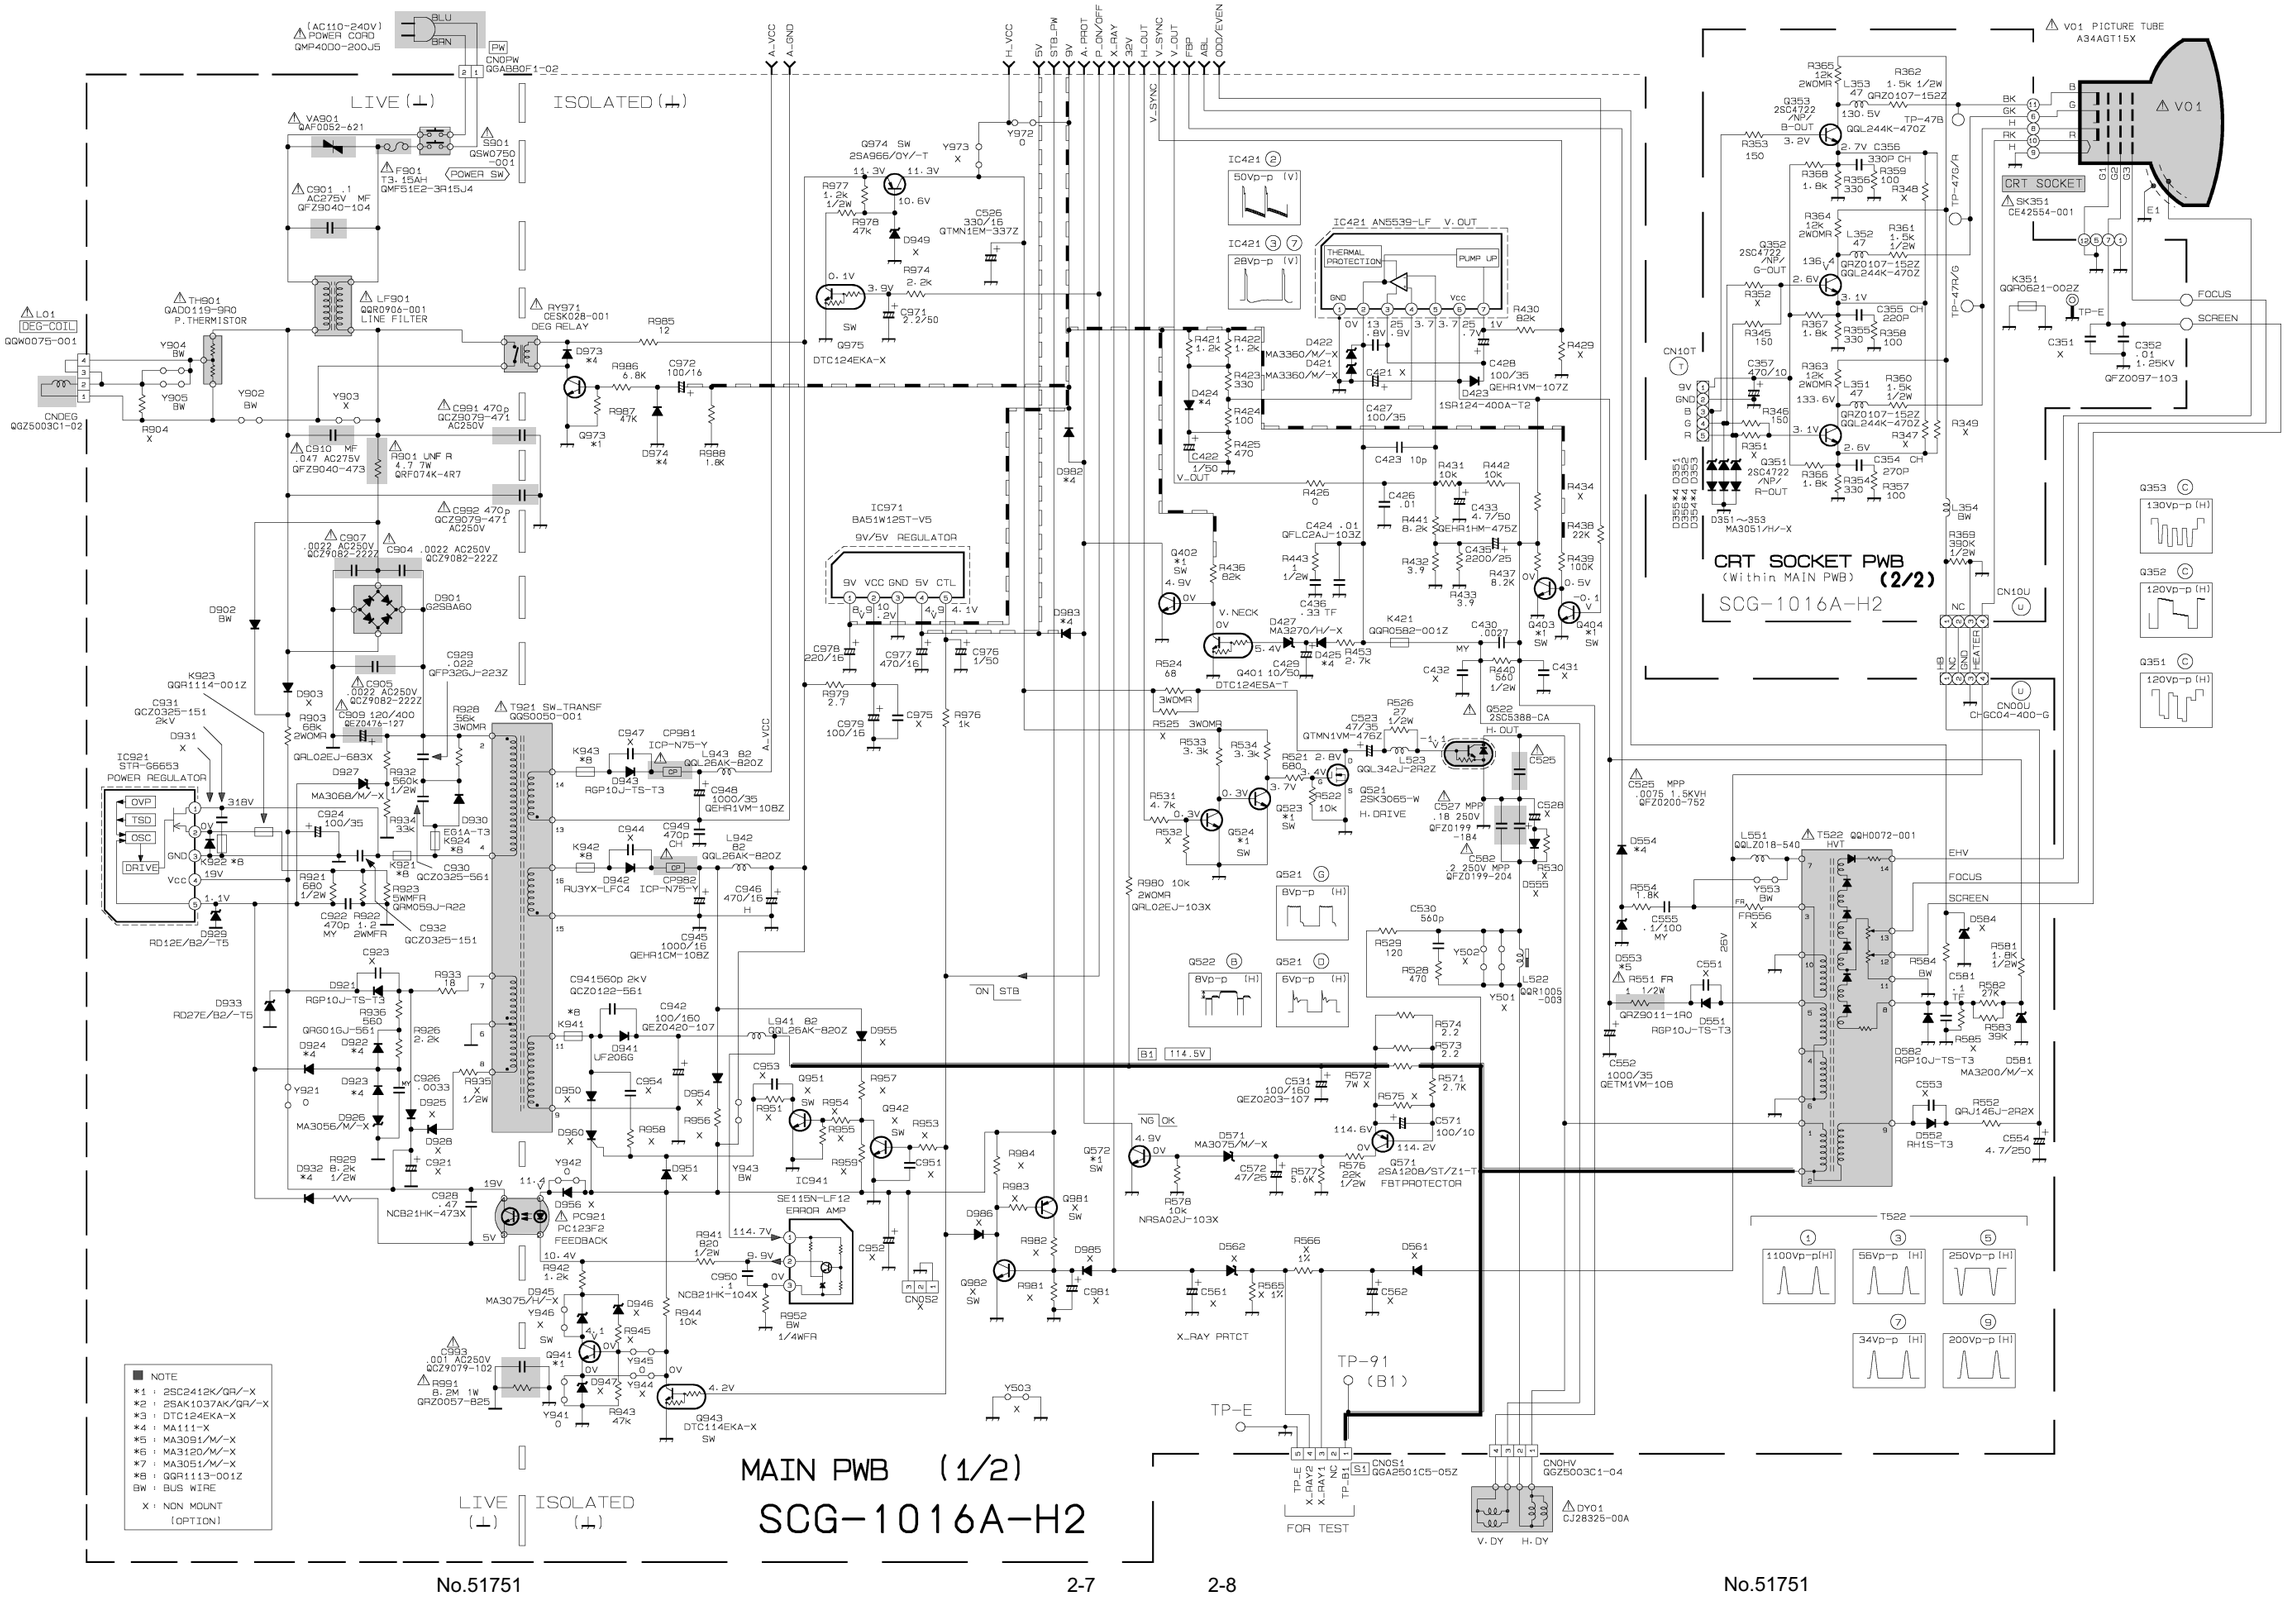

PATTERN DIAGRAMS *MAIN PWB PATTERN*

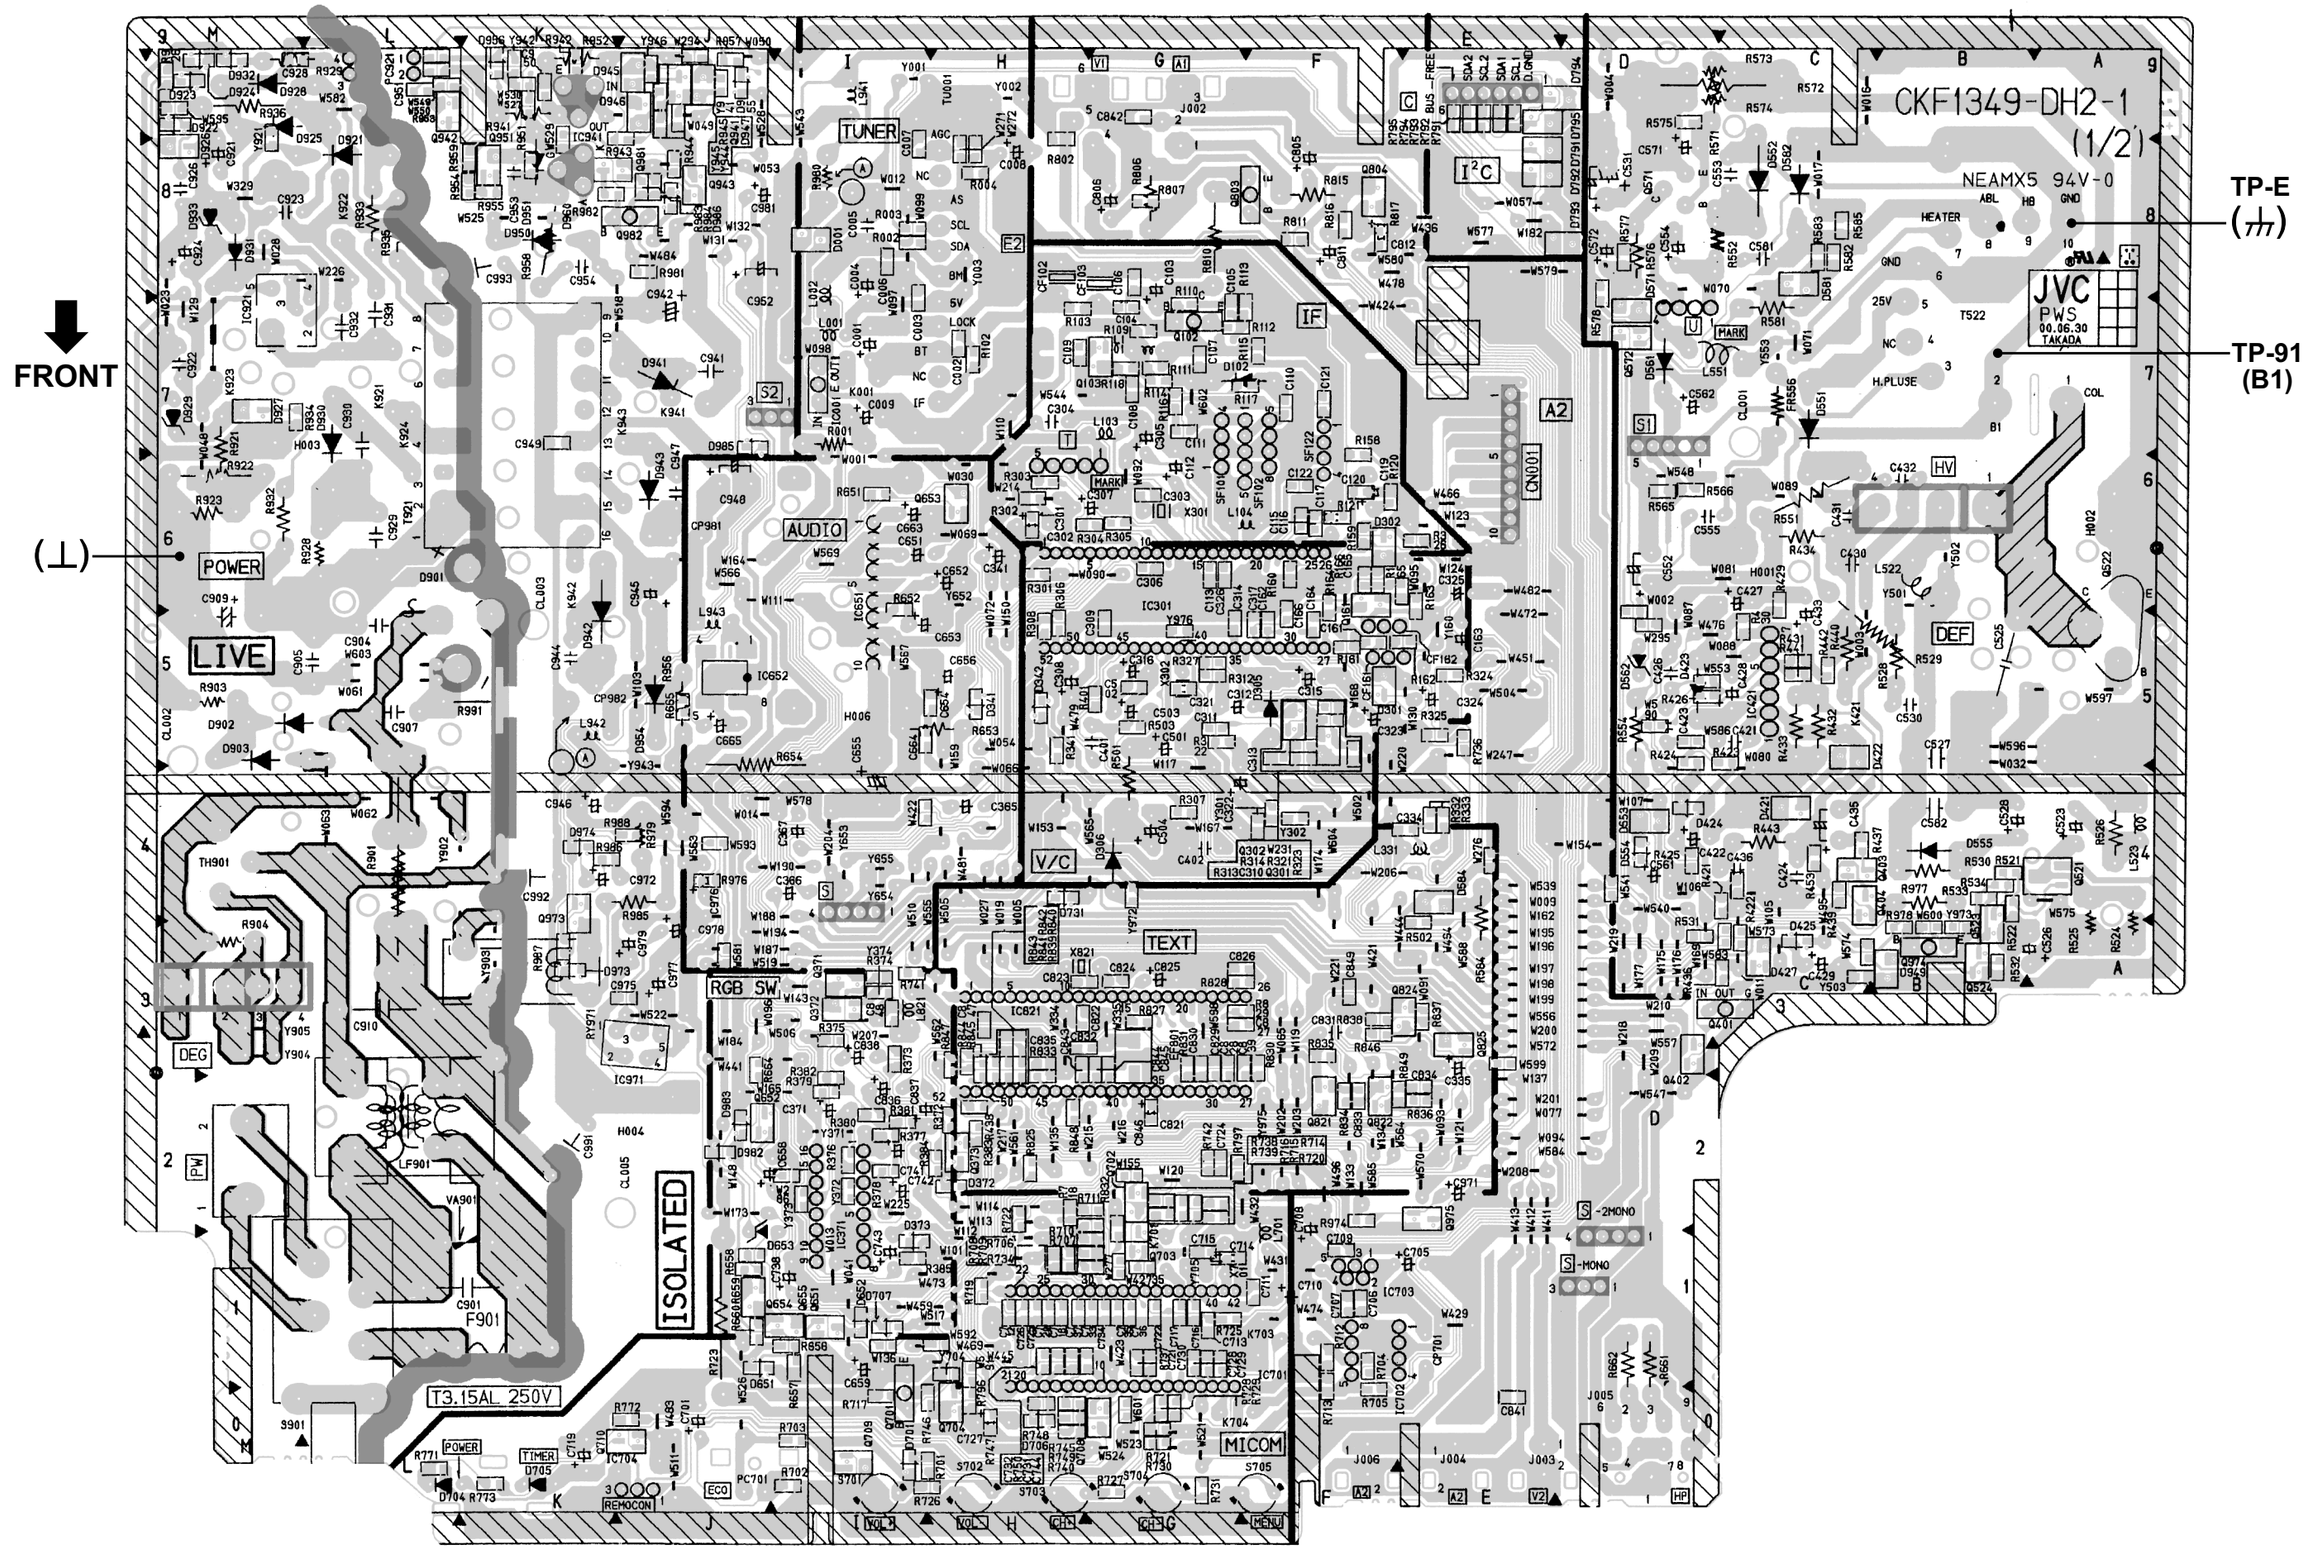

PARTS LIST

CAUTION

- The parts identified by the ⚠ symbol are important for the safety. Whenever replacing these parts, be sure to use specified ones to secure the safety .
- The parts not indicated in this Parts List and those which are filled with lines —— in the Parts No. columns will not be supplied.
- P. W. Board Ass'y will not be supplied, but those which are filled with the Parts No. in the Parts No. columns will be supplied.

ABBREVIATIONS OF RESISTORS, CAPACITORS AND TOLERANCES

RESISTORS		CAPACITORS	
C R	Carbon Resistor	C CAP.	Ceramic Capacitor
F R	Fusible Resistor	E CAP.	Electrolytic Capacitor
P R	Plate Resistor	M CAP.	Mylar Capacitor
V R	Variable Resistor	HV CAP.	High Voltage Capacitor
HV R	High Voltage Resistor	MF CAP.	Metalized Film Capacitor
MF R	Metal Film Resistor	MM CAP.	Metalized Mylar Capacitor
MG R	Metal Glazed Resistor	MP CAP.	Metalized Polystyrol Capacitor
MP R	Metal Plate Resistor	PP CAP.	Polypropylene Capacitor
OM R	Metal Oxide Film Resistor	PS CAP.	Polystyrol Capacitor
CMF R	Coating Metal Film Resistor	TF CAP.	Thin Film Capacitor
UNF R	Non-Flammable Resistor	MPP CAP.	Metalized Polypropylene Capacitor
CH V R	Chip Variable Resistor	TAN. CAP.	Tantalum Capacitor
CH MG R	Chip Metal Glazed Resistor	CH C CAP.	Chip Ceramic Capacitor
COMP. R	Composition Resistor	BP E CAP.	Bi-Polar Electrolytic Capacitor
LPTC R	Linear Positive Temperature Coefficient Resistor	CH AL E CAP.	Chip Aluminum Electrolytic Capacitor
		CH AL BP CAP.	Chip Aluminum Bi-Polar Capacitor
		CH TAN. E CAP.	Chip Tantalum Electrolytic Capacitor
		CH AL BP E CAP.	Chip Tantalum Bi-Polar Electrolytic Capacitor

TOLERANCES									
F	G	J	K	M	N	R	H	Z	P
±1%	±2%	±5%	±10%	±20%	±30%	+30% -10%	+50% -10%	+80% -20%	+100% -0%

CONTENTS

■ EXPLODED VIEW PARTS LIST ····· 32

■ EXPLODED VIEW ····· 32, 33

■ PRINTED WIRING BOARD PARTS LIST

● MAIN P.W.BOARD ASS'Y (SCG-1016A-H2) (With CRT SOCKET PW BOARD) ····· 34

■ PACKING ····· 38

■ PACKING PARTS LIST ····· 38

■ REMOTE CONTROL UNIT PARTS LIST ····· 39

EXPLODED VIEW PARTS LIST

⚠	Ref.No.	Part No.	Part Name	Description
⚠	V01	A34AGT15X	PICTURE TUBE(C)	
⚠	DY01	CJ28325-00A	DEFLECTION YOKE	
⚠	L01	QQW0075-001	DEGAUSSING COIL	
⚠	T1522	QQH0072-001	HVT	
⚠	1	LC10831-001C-H	FRONT CABINET	
	2	CM46880-002-H	JVC MARK	
	3	LC30617-001C-H	E.E. WINDOW	
	4	LC30618-001A-H	L.E.D.LENS	
	5	CM35235-003-H	SPRING	
	6	LC30616-004A-H	POWER KNOB	
	7	LC20292-004A-H	CONTROL KNOB	
⚠	8	QMP40D0-200J5	POWER CORD	
⚠	9	CM47005-A01-H	CORD CLAMP	
	10	CE42153-00AJ1	WEDGE	(×3)
	11	CE40305-00B	P.C.MAGNET	
	12	CHGB0016-0A	BRAIDED WIRE	
	13	A48457-3-H	SPRING	
	14	CM48144-002-H	P.W.B.STOPPER	
	15	QAS0054-001	SPEAKER	(×2)SP01,SP02
⚠	16	CM12961-D01-VH	REAR COVER	
	17	QYSBSFG4016Z	TAPPING SCREW	(×5)
	18	QYSBSF3010Z	TAPPING SCREW	
⚠	19	LC20377-010B-H	RATING LABEL	

EXPLODED VIEW

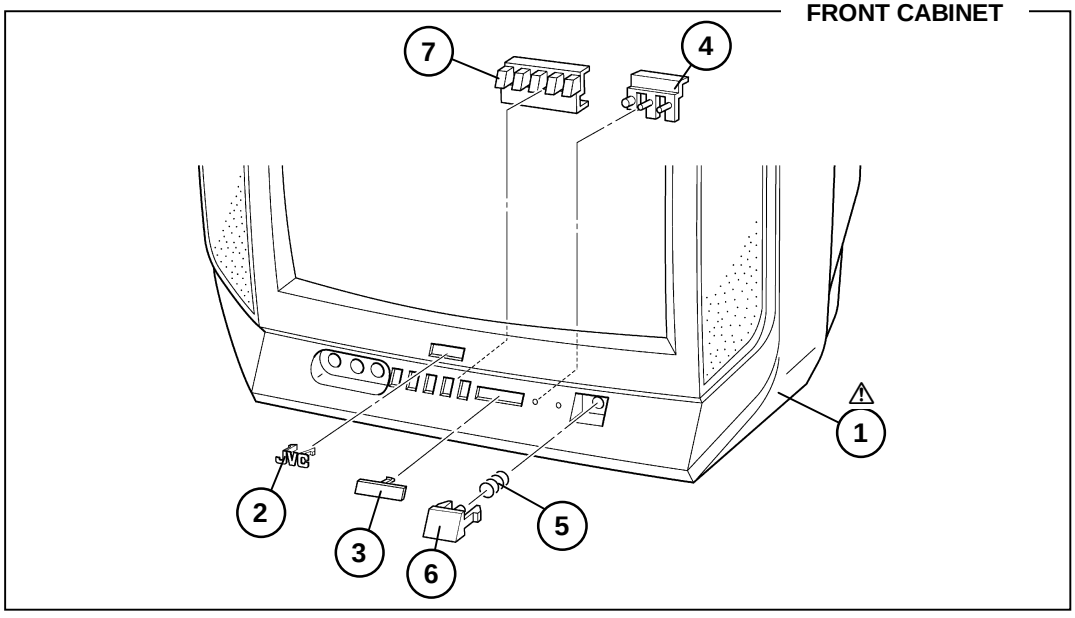

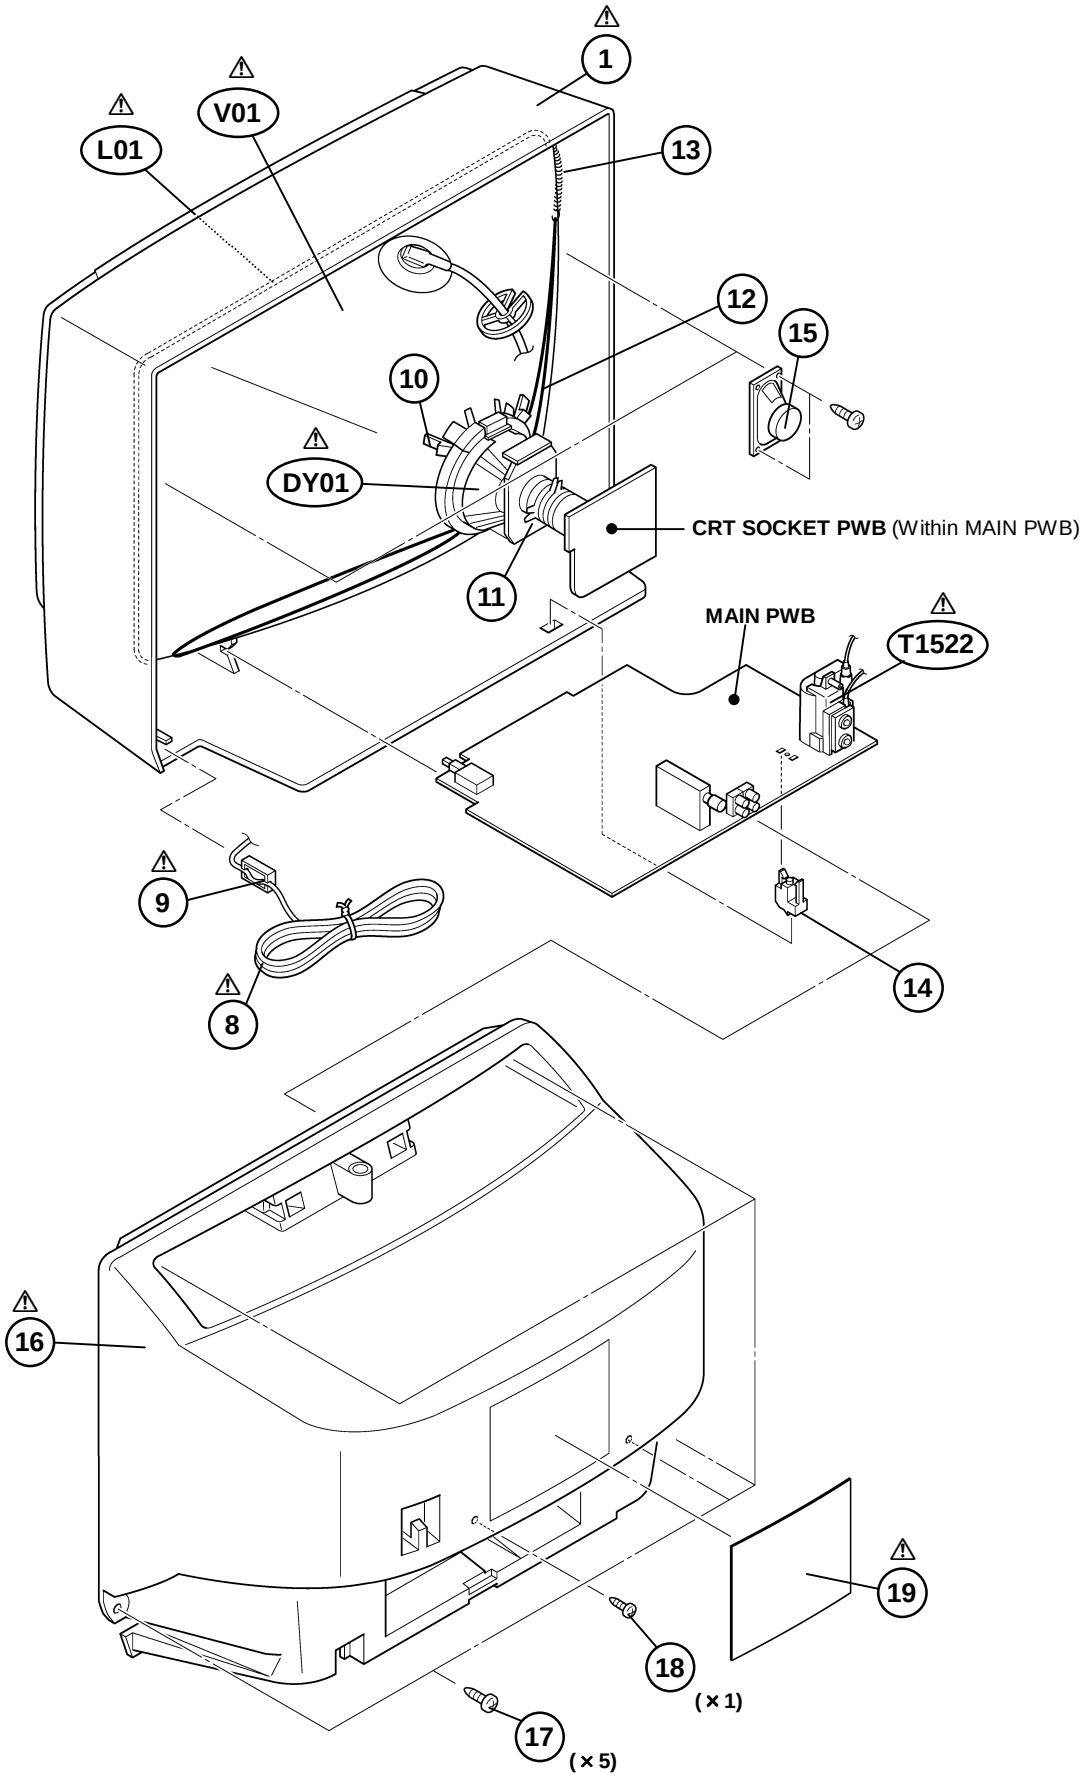
1
V01
L01
13
12
15
10
DY01
CRT SOCKET PWB (Within MAIN PWB)
11
MAIN PWB
T1522
9
8
14
16
19
18
(× 1)
17
(× 5)

PRINTED WIRING BOARD PARTS LIST

MAIN P.W. BOARD ASS'Y (SCG-1016A-H2)

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1002-03	NRSA63J-221X	MG R	220Ω 1/16W J
	R1004	NRSA63J-563X	MG R	56kΩ 1/16W J
	R1102	NRSA63J-750X	MG R	75Ω 1/16W J
	R1103	NRSA63J-100X	MG R	10Ω 1/16W J
	R1109	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1110	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1111	NRSA02J-181X	MG R	180Ω 1/10W J
	R1112	NRSA63J-100X	MG R	10Ω 1/16W J
	R1113	NRSA63J-101X	MG R	100Ω 1/16W J
	R1114	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1115	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1117	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1118	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1120	NRSA63J-391X	MG R	390Ω 1/16W J
	R1121	NRSA63J-221X	MG R	220Ω 1/16W J
	R1159	NRSA02J-184X	MG R	180kΩ 1/10W J
	R1301	NRSA63J-221X	MG R	220Ω 1/16W J
	R1302	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1303-05	NRSA63J-101X	MG R	100Ω 1/16W J
	R1306	NRSA63J-221X	MG R	220Ω 1/16W J
	R1307	NRSA63J-122X	MG R	1.2kΩ 1/16W J
	R1308	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1312	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1313	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1314	NRSA02J-102X	MG R	1kΩ 1/10W J
	R1321	NRSA63J-152X	MG R	1.5kΩ 1/16W J
	R1322	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1323	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1324	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1326	NRSA63J-101X	MG R	100Ω 1/16W J
	R1327	NRSA02J-475X	MG R	4.7MΩ 1/10W J
	R1333	NRSA63J-681X	MG R	680Ω 1/16W J
	R1341	NRSA63J-332X	MG R	3.3kΩ 1/16W J
	R1345-46	NRSA63J-151X	MG R	150Ω 1/16W J
	R1353	NRSA63J-151X	MG R	150Ω 1/16W J
	R1354-56	NRSA02J-331X	MG R	330Ω 1/10W J
	R1357-59	NRSA63J-101X	MG R	100Ω 1/16W J
	R1360-61	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1362	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1363-65	QRL029J-123	OM R	12kΩ 2W J
	R1366-68	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1369	QRE121J-394Y	C R	390kΩ 1/2W J
	R1372	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1373	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1374	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1375	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1376	NRSA63J-562X	MG R	5.6kΩ 1/16W J
	R1377-79	NRSA63J-104X	MG R	100kΩ 1/16W J
	R1380-82	NRSA02J-154X	MG R	150kΩ 1/10W J
	R1383	NRSA63J-273X	MG R	27kΩ 1/16W J
	R1384	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1385	NRSA63J-123X	MG R	12kΩ 1/16W J
	R1401	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1421-22	NRSA63J-122X	MG R	1.2kΩ 1/16W J
	R1423	NRSA63J-331X	MG R	330Ω 1/16W J
	R1424	NRSA63J-101X	MG R	100Ω 1/16W J
	R1425	NRSA63J-471X	MG R	470Ω 1/16W J
	R1426	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1430	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1431	NRSA02J-103X	MG R	10kΩ 1/10W J
	R1432-33	QRE121J-3R9Y	C R	3.9Ω 1/2W J
	R1436	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1437	NRSA63J-822X	MG R	8.2kΩ 1/16W J
	R1438	NRSA63J-223X	MG R	22kΩ 1/16W J
	R1439	NRSA63J-104X	MG R	100kΩ 1/16W J
	R1440	QRE121J-561Y	C R	560Ω 1/2W J
	R1441	NRSA02J-822X	MG R	8.2kΩ 1/10W J
	R1442	NRSA02J-103X	MG R	10kΩ 1/10W J

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1443	QRE121J-1R0Y	C R	1.0Ω 1/2W J
	R1453	NRSA02J-272X	MG R	2.7kΩ 1/10W J
	R1501	QRE121J-101Y	C R	100Ω 1/2W J
	R1502	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1503	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1521	NRSA63J-681X	MG R	680Ω 1/16W J
	R1522	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1524	QRL03EJ-680X	OM R	68Ω 3W J
	R1526	QRE121J-270Y	C R	27Ω 1/2W J
	R1528	QRE121J-471Y	C R	470Ω 1/2W J
	R1529	QRG029J-121	OM R	120Ω 2W J
	R1531	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1533-34	NRSA63J-332X	MG R	3.3kΩ 1/16W J
⚠	R1551	QRZ9011-1R0	F R	1Ω 1/2W J
	R1552	QRJ146J-2R2X	C R	2.2Ω 1/4W J
	R1554	QRE121J-182Y	C R	1.8kΩ 1/2W J
	R1571	QRE121J-272Y	C R	2.7kΩ 1/2W J
	R1573	QRT02EJ-1R5X	MF R	1.5Ω 2W J
	R1574	QRT02EJ-2R7X	MF R	2.7Ω 2W J
	R1576	QRE121J-223Y	C R	22kΩ 1/2W J
	R1577	NRSA63J-562X	MG R	5.6kΩ 1/16W J
	R1578	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1581	QRE121J-182Y	C R	1.8kΩ 1/2W J
	R1582	NRSA63J-273X	MG R	27kΩ 1/16W J
	R1583	NRSA63J-393X	MG R	39kΩ 1/16W J
	R1651	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1652	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1653	QRE121J-1R0Y	C R	1.0Ω 1/2W J
	R1654	QRX029J-4R7	MF R	4.7Ω 2W J
	R1656	NRSA63J-123X	MG R	12kΩ 1/16W J
	R1657	NRSA63J-391X	MG R	390Ω 1/16W J
	R1658-59	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1660	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1661-62	QRE121J-271Y	C R	270Ω 1/2W J
	R1664	NRSA63J-221X	MG R	220Ω 1/16W J
	R1665	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1701	NRSA02J-562X	MG R	5.6kΩ 1/10W J
	R1702	NRSA02J-682X	MG R	6.8kΩ 1/10W J
	R1703	NRSA02J-392X	MG R	3.9kΩ 1/10W J
	R1704-05	NRSA63J-221X	MG R	220Ω 1/16W J
	R1706-07	NRSA63J-561X	MG R	560Ω 1/16W J
	R1708	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1709-14	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1715-16	NRSA63J-221X	MG R	220Ω 1/16W J
	R1718	NRSA63J-561X	MG R	560Ω 1/16W J
	R1719	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1720	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1721	NRSA63J-103X	MG R	10kΩ 1/16W J
⚠	R1723	QRZ9023-270	F R	27 Ω 2W J
	R1725	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1726	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1727	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1728-29	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1730	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1731	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1736	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1737	NRSA63J-104X	MG R	100kΩ 1/16W J
	R1738-39	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1740	NRSA63J-392X	MG R	3.9kΩ 1/16W J
	R1741	NRSA63J-561X	MG R	560Ω 1/16W J
	R1742	NRSA63J-563X	MG R	56kΩ 1/16W J
	R1745	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1746	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1747	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1748	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1749	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1771-72	NRSA63J-821X	MG R	820Ω 1/16W J
	R1791-95	NRSA63J-221X	MG R	220Ω 1/16W J

RESISTOR

⚠	Symbol No.	Part No.	Part Name	Description
	R1796	NRSA02J-154X	MG R	150kΩ 1/10W J
	R1797	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1802	NRSA02J-750X	MG R	75Ω 1/10W J
	R1806	QRE121J-271Y	C R	270Ω 1/2W J
	R1807	NRSA02J-680X	MG R	68Ω 1/10W J
	R1810	QRG01GJ-560	OM R	56Ω 1W J
	R1811	NRSA63J-221X	MG R	220Ω 1/16W J
	R1815	QRE121J-181Y	C R	180Ω 1/2W J
	R1816	NRSA63J-681X	MG R	680Ω 1/16W J
	R1817	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1825	NRSA63J-221X	MG R	220Ω 1/16W J
	R1827	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1828	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1830	NRSA63J-273X	MG R	27kΩ 1/16W J
	R1831	NRSA63J-105X	MG R	1MΩ 1/16W J
	R1832	NRSA63J-221X	MG R	220Ω 1/16W J
	R1833	NRSA63J-822X	MG R	8.2kΩ 1/16W J
	R1834	NRSA63J-393X	MG R	39kΩ 1/16W J
	R1835	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1836	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1837	NRSA63J-393X	MG R	39kΩ 1/16W J
	R1838	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1839	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1840	NRSA63J-331X	MG R	330Ω 1/16W J
	R1841	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1842	NRSA63J-331X	MG R	330Ω 1/16W J
	R1843	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1844	NRSA63J-331X	MG R	330Ω 1/16W J
	R1845	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1846	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1847	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1848	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1849	NRSA63J-153X	MG R	15kΩ 1/16W J
⚠	R1901	QRF074K-4R7	UNF R	4.7 Ω 7W J
	R1903	QRL02EJ-683X	OM R	68kΩ 2W J
	R1921	QRE121J-681Y	C R	680Ω 1/2W J
	R1922	QRT029J-1R2	MF R	1.2Ω 2W J
	R1923	QRM059J-R22	MP R	0.22 Ω 5W J
	R1926	NRSA02J-222X	MG R	2.2kΩ 1/10W J
	R1928	QRL03EJ-563X	O M R	56kΩ 3W J
	R1929	QRE121J-822Y	C R	8.2kΩ 1/2W J
	R1932	QRE121J-564Y	C R	560kΩ 1/2W J
	R1933	QRE121J-220Y	C R	22Ω 1/2W J
	R1934	NRSA63J-333X	MG R	33kΩ 1/16W J
	R1936	QRG01GJ-561	OM R	560Ω 1W J
	R1941	QRE121J-821Y	C R	820Ω 1/2W J
	R1942	NRSA63J-122X	MG R	1.2kΩ 1/16W J
	R1943	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1944	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1974	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1976	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1977	QRE121J-122Y	C R	1.2kΩ 1/2W J
	R1978	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1979	QRT02EJ-1R2X	M F RESISTOR	1.2Ω 1/10W J
	R1980	QRL02EJ-103X	O M R	10kΩ 2W J
	R1985	QRE121J-120Y	C R	12Ω 1/2W J
	R1986	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1987	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1988	NRSA63J-182X	MG R	1.8kΩ 1/16W J
⚠	R1991	QRZ0057-825	C R	8.2MΩ 1W J

CAPACITOR

C1001	QETN1HM-106Z	E CAP.	10µF	50V M
C1002	NCB31HK-103X	C CAP.	0.01µF	50V K
C1004	QETN1CM-227Z	E CAP.	220µF	16V M
C1005	QFV71HJ-104Z	MF CAP.	0.1µF	50V J
C1008	QETN1HM-475Z	E CAP.	4.7µF	50V M
C1103	QETN1EM-476Z	E CAP.	47µF	25V M
C1104-07	NCB31HK-472X	C CAP.	4700pF	50V K
C1109	NCB31HK-472X	C CAP.	4700pF	50V K

CAPACITOR

⚠	Symbol No.	Part No.	Part Name	Description
	C1110	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	C1112	QETN1EM-476Z	E CAP.	47µF 25V M
	C1113	NCB31HK-472X	C CAP.	4700pF 50V K
	C1115-16	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1117	QFV71HJ-224Z	MF CAP.	0.22µF 50V J
	C1119	QETN1HM-474Z	E CAP.	0.47µF 50V M
	C1120	NDC31HJ-121X	C CAP.	120pF 50V J
	C1121-22	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1162	NCB31HK-152X	CHIP CAP.	1500pF 50V K
	C1301	NCB21HK-123X	C CAP.	0.012µF 50V K
	C1302	QETN1HM-475Z	E CAP.	4.7µF 50V M
	C1303	NDC31HJ-100X	C CAP.	10pF 50V J
	C1304	QFV71HJ-474Z	MF CAP.	0.47µF 50V J
	C1305	QETN1HM-474Z	E CAP.	0.47µF 50V M
	C1306	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1307	QETN1CM-477Z	E CAP.	470µF 16V M
	C1308	QETN1CM-107Z	E CAP.	100µF 16V M
	C1309	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1310	NDC31HJ-221X	C CAP.	220pF 50V J
	C1311	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1312	QENC1HM-474Z	BP E CAP.	0.47µF 50V M
	C1313	QETN1HM-335Z	E CAP.	3.3µF 50V M
	C1314	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1315	QETN1CM-107Z	E CAP.	100µF 16V M
	C1316	QETN1HM-106Z	E CAP.	10µF 50V M
	C1317	NCB31EK-473X	CHIP CAP.	0.047µF 25V K
	C1321	NDC31HJ-120X	C CAP.	12pF 50V J
	C1322	NCB21HK-273X	C CAP.	0.027µF 50V K
	C1323	QETN1HM-474Z	E CAP.	0.47µF 50V M
	C1324	QETN1HM-106Z	E CAP.	10µF 50V M
	C1325	QENC1HM-106Z	BP E CAP.	10µF 50V M
	C1326	NCS21HJ-221X	C CAP.	220pF 50V J
	C1341	QETN1HM-106Z	E CAP.	10µF 50V M
	C1352	QFZ0097-103	MM CAP.	0.01µF 1250V K
	C1354	NDC31HJ-271X	CER.CAPACITOR	270pF 50V J
	C1355	NDC31HJ-221X	C CAP.	220pF 50V J
	C1356	NDC31HJ-331X	C CAP.	330pF 50V J
	C1357	QETN1AM-477Z	E CAP.	470µF 10V M
	C1365-67	QENC1HM-105Z	BP E CAP.	1µF 50V M
	C1401	QFV71HJ-474Z	MF CAP.	0.47µF 50V J
	C1402	QFV71HJ-104Z	MF CAP.	0.1µF 50V J
	C1422	QETN1HM-105Z	E CAP.	1µF 50V M
	C1423	QCS32HJ-100Z	C CAP.	10pF 500V J
	C1424	QFLC2AJ-103Z	M CAP.	0.01µF 100V J
	C1426	QFLC1HJ-103Z	M CAP.	0.01µF 50V J
	C1427	QETN1VM-107Z	E CAP.	100µF 35V M
	C1428	QEHR1VM-107Z	E CAP.	100µF 35V M
	C1429	QETN1HM-106Z	E CAP.	10µF 50V M
	C1430	QFN32AJ-272Z	MYLAR CAPACITOR	2700pF 100V J
	C1433	QEHR1HM-475Z	E CAP.	4.7µF 50V M
	C1435	QETM1EM-228	E CAP.	2200µF 25V M
	C1436	QFV71HJ-334Z	MF CAP.	0.33µF 50V J
	C1501	QETN1HM-476Z	E CAP.	47µF 50V M
	C1502	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1503	QETN1HM-106Z	E CAP.	10µF 50V M
	C1504	QETN1CM-227Z	E CAP.	220µF 16V M
	C1523	QTMN1VM-476Z	E CAP.	47µF 35V M
⚠	C1525	QFZ0200-752	MPP CAP.	7500pF1.5kVH ±3%
	C1526	QTMN1EM-337Z	E CAP.	350µF 25V M
⚠	C1527	QFZ0199-184	MPP CAP.	0.18µF 250V J
	C1530	QCB32HK-561Z	C CAP.	560pF 500V K
	C1531	QEZ0203-107	E CAP.	100µF 160V M
	C1552	QETM1VM-108	E CAP.	1000µF 35V M
	C1554	QETN2EM-475Z	E CAP.	4.7µF 250V M
	C1555	QFLC2AJ-104Z	M CAP.	0.1µF 100V J
	C1571	QETN1AM-107Z	E CAP.	100µF 10V M
	C1572	QETN1EM-476Z	E CAP.	47µF 25V M
	C1581	QFV71HJ-104Z	MF CAP.	0.1µF 50V J
⚠	C1582	QFZ0199-204	MPP CAP.	0.2µF 250V J
	C1651	QTNC1HM-105Z	E CAP.	1µF 50V M

⚠	Symbol No.	Part No.	Part Name	Description
	CAPACITOR			
	C1652-53	QEHR1HM-106Z	E CAP.	10µF 50V M
	C1654	NCB21HK-104X	CHIP CAP.	0.1µF 50V K
	C1655	QEHQ1VM-228	E CAP.	2200µF 35V M
	C1656	QEHR1EM-477Z	E CAP.	470µF 25V M
	C1658	QETN1HM-226Z	E CAP.	22µF 50V M
	C1659	QETN1CM-107Z	E CAP.	100µF 16V M
	C1663	QEHR1HM-106Z	E CAP.	10µF 50V M
	C1664	NCB21HK-104X	CHIP CAP.	0.1µF 50V K
	C1665	QEHR1HM-105Z	E CAP.	1µF 50V M
	C1701	QETN1HM-106Z	E CAP.	10µF 50V M
	C1705	QETN1CM-477Z	E CAP.	470µF 16V M
	C1706	NCB21EK-104X	C CAP.	0.1µF 25V K
	C1707	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1708	QETN1EM-476Z	E CAP.	47µF 25V M
	C1709	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1710	QETN1CM-107Z	E CAP.	100µF 16V M
	C1711-13	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1714-15	NDC31HJ-330X	C CAP.	33pF 50V J
	C1716-17	NDC31HJ-181X	C CAP.	180pF 50V J
	C1718	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1719	QETN1HM-105Z	E CAP.	1µF 50V M
	C1720	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1721	NCB21HK-333X	C CAP.	0.033µF 50V K
	C1722	NDC31HJ-101X	C CAP.	100pF 50V J
	C1728-29	NDC31HJ-181X	C CAP.	180pF 50V J
	C1730	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1738	QETN1HM-226Z	E CAP.	22µF 50V M
	C1741-43	QETN1HM-106Z	E CAP.	10µF 50V M
	C1744	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1805	QETN1CM-227Z	E CAP.	220µF 16V M
	C1806	QETN1CM-477Z	E CAP.	470µF 16V M
	C1811	QETN1HM-106Z	E CAP.	10µF 50V M
	C1821	QETN1CM-107Z	E CAP.	100µF 16V M
	C1822	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1823	NDC31HJ-330X	C CAP.	33pF 50V J
	C1824	NDC31HJ-390X	C CAP.	39pF 50V J
	C1825	QETN1HM-105Z	E CAP.	1µF 50V M
	C1826	NCB21HK-333X	C CAP.	0.033µF 50V K
	C1828-29	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1830	NDC31HJ-470X	C CAP.	47pF 50V J
	C1831	QFV71HJ-334Z	MF CAP.	0.33µF 50V J
	C1832	NCB31HK-103X	C CAP.	0.01µF 50V K
	C1833	NDC31HJ-680X	C CAP.	68pF 50V J
	C1835	NDC31HJ-221X	C CAP.	220pF 50V J
	C1836-38	QETN1HM-335Z	E CAP.	3.3µF 50V M
	C1839	NDC31HJ-471X	CER.CAPACITOR	470pF 50V J
	C1841	NCB31HK-152X	CHIP CAP.	1500pF 50V K
	C1843-49	NCB31HK-103X	C CAP.	0.01µF 50V K
⚠	C1901	QFZ9040-104	MF CAP.	0.1µFAC275V M
⚠	C1904	QCZ9082-222Z	C CAP.	2200pFAC250V M
⚠	C1905	QCZ9082-222Z	C CAP.	2200pFAC250V M
⚠	C1907	QCZ9082-222Z	C CAP.	2200pFAC250V M
⚠	C1909	QEZ0476-127	E.CAPACITOR	120µF 400V M
⚠	C1910	QFZ9040-473	MF CAP.	0.047µFAC275V M
	C1922	QFLC1HJ-471Z	M CAP.	470pF 50V J
	C1924	QETN1VM-107Z	E CAP.	100µF 35V M
	C1926	QFLC1HJ-332Z	M CAP.	3300pF 50V J
	C1928	NCB21HK-473X	C CAP.	0.047µF 50V K
	C1929	QFP32GJ-223Z	PP CAP.	0.022µF 400V J
	C1930	QCZ0325-561	C CAP.	560pF 2kV K
	C1931-32	QCZ0325-151	C CAP.	150pF 2kV K
	C1941	QCZ0122-561	C CAP.	560pF 2kV K
	C1942	QEZ042O-107	E CAP.	100µF 160V M
	C1945	QEHR1CM-108Z	E CAP.	1000µF 16V M
	C1946	QEHR1CM-477Z	E CAP.	470µF 16V M
	C1948	QEHR1VM-108Z	E CAP.	1000µF 35V M
	C1949	NDC31HJ-471X	CER.CAPACITOR	470pF 50V J
	C1950	NCB21HK-104X	CHIP CAP.	0.1µF 50V K
	C1971	QETN1HM-226Z	E CAP.	22µF 50V M
	C1972	QETN1CM-107Z	E CAP.	100µF 16V M
	C1976	QETN1HM-105Z	E CAP.	1µF 50V M

⚠	Symbol No.	Part No.	Part Name	Description
	CAPACITOR			
	C1977	QETN1CM-477Z	E CAP.	470µF 16V M
	C1978	QETN1CM-227Z	E CAP.	220µF 16V M
	C1979	QETN1CM-107Z	E CAP.	100µF 16V M
⚠	C1991	QCZ9079-471	C CAP.	470pFAC250V K
⚠	C1992	QCZ9079-471	C CAP.	470pFAC250V K
⚠	C1993	QCZ9079-102	C CAP.	1000pFAC250V M
	TRANSFORMER			
⚠	T1522	QQH0072-001	H.V.TRANSF.	
⚠	T1921	QQS0050-001	SW TRANSF.	
	COIL			
	L1001	QQL244K-8R2Z	PEAKING COIL	8.2µH
	L1101	QQLZ014-2R2	PEAKING COIL	2.2µH
	L1103	QQL244K-8R2Z	PEAKING COIL	8.2µH
	L1331	QQL244K-470Z	PEAKING COIL	47µH
	L1351-53	QQL244K-470Z	PEAKING COIL	47µH
	L1522	QQR1005-003	LINEARITY COIL	
	L1523	QQL342J-2R2Z	INDUCTOR	
	L1551	QQLZ026-640	HEATER CHOKE	
	L1701	QQL244J-5R6Z	PEAKING COIL	5.6µH
	L1821	QQL244J-5R6Z	PEAKING COIL	5.6µH
	L1941-43	QQL26AK-820Z	CHOKE COIL	
	DIODE			
	D1001	MA3330/L/-X	ZENER DIODE	
	D1102	1SS85-T2	SI.DIODE	
	D1301-02	MA3091/M/-X	ZENER DIODE	
	D1305	RB100A-T2	SI.DIODE	
	D1306	1SR124-400A-T2	SI.DIODE	
	D1341-42	MA111-X	SI.DIODE	
	D1351-53	MA3051/H/-X	ZENER DIODE	
	D1354-56	MA111-X	SI.DIODE	
	D1372-73	MA111-X	SI.DIODE	
	D1421-22	MA3360/M/-X	ZENER DIODE	
	D1423	1SR124-400A-T2	SI.DIODE	
	D1424-25	MA111-X	SI.DIODE	
	D1427	MA3270/H/-X	ZENER DIODE	
	D1551	RGP10J-TS-T3	SI.DIODE	
	D1552	RH1S-T3	SI.DIODE	
	D1553	MA3091/M/-X	ZENER DIODE	
	D1554	MA111-X	SI.DIODE	
	D1571	MA3075/M/-X	ZENER DIODE	
	D1581	MA3200/M/-X	CHIP ZENER DIODE	
	D1582	RGP10J-TS-T3	SI.DIODE	
	D1651-52	MA111-X	SI.DIODE	
	D1653	MTZJ18A-T2	ZENER DIODE	
	D1701	MA111-X	SI.DIODE	
	D1704	L-132XID-T16	L.E.D.(RED)	
	D1705	L-132XND-T16	L.E.D.(RED)	
	D1706-07	MA111-X	SI.DIODE	
	D1731	MA111-X	SI.DIODE	
⚠	D1901	G2SBA60	BRIDGE DIODE	
	D1921	RGP10J-TS-T3	SI.DIODE	
	D1922-24	MA111-X	SI.DIODE	
	D1926	MA3056/M/-X	ZENER DIODE	
	D1927	MA3068/M/-X	ZENER DIODE	
	D1929	RD12E/B2/-T5	ZENER DIODE	
	D1930	EG1A-T3	SI.DIODE	
	D1932	MA111-X	SI.DIODE	
	D1933	RD27E/B2/-T5	ZENER DIODE	
	D1941	RU3AM-LFC4	SI.DIODE	
	D1942	RU3YX-LFC4	SI.DIODE	
	D1943	RGP10J-TS-T3	SI.DIODE	
	D1945	MA3075/H/-X	ZENER DIODE	
	D1973-74	MA111-X	SI.DIODE	
	D1982-83	MA111-X	SI.DIODE	

TRANSISTOR

⚠	Symbol No.	Part No.	Part Name	Description
	Q1102	2SC5083/L-P/-T	SI.TRANSISTOR	
	Q1103	DTC124EKA-X	DIGI.TRANSISTOR	
	Q1301	2SA1037AK/QR/-X	SI.TRANSISTOR	
	Q1302	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1351-53	2SC4722/NP/	SI.TRANSISTOR	
	Q1371-73	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1401	DTC124ESA-T	DIGI.TRANSISTOR	
	Q1402-04	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1521	2SK3065-W	CHIP FET	
⚠	Q1522	2SC5388-CA	POWER TRANSISTOR	H.OUT
	Q1523-24	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1571	2SA1208/ST/Z1-T	SI.TRANSISTOR	
	Q1572	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1651	2SA1037AK/QR/-X	SI.TRANSISTOR	
	Q1652	DTC323TK-X	DIGI.TRANSISTOR	
	Q1654-55	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1702	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1703	DTC124EKA-X	DIGI.TRANSISTOR	
	Q1708	DTC124EKA-X	DIGI.TRANSISTOR	
	Q1709	2SA1037AK/QR/-X	SI.TRANSISTOR	
	Q1803	2SC1815/YG/-T	SI.TRANSISTOR	
	Q1804	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1821	2SA1037AK/QR/-X	SI.TRANSISTOR	
	Q1822	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1824	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1825	DTC124EKA-X	DIGI.TRANSISTOR	
	Q1941	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1943	DTC114EKA-X	DIGI.TRANSISTOR	
	Q1973	2SC2412K/QR/-X	SI.TRANSISTOR	
	Q1974	2SA966/OY/-T	SI.TRANSISTOR	
	Q1975	DTC124EKA-X	DIGI.TRANSISTOR	

IC

IC1301	NN5198K	I C	
IC1371	TC4053BP/N/	I.C.(DIGI-MOS)	
IC1421	AN5539-LF	I C	
IC1651	LA4287	I C	
IC1652	SI-5001X-X	I.C(HYBRID)	
IC1701	MN1873287JA	I.C(MICRO-COMP)	
IC1702	AT24C08-21FTR	I.C.	(SERVICE)
IC1703	L78LR05E-MA	I.C.(MONO-ANA)	
IC1704	PIC-28143SY	IR DETECT UNIT	
IC1821	SDA5254-2-B003	I C	
IC1921	STR-G6653	I C	
IC1941	SE115N-LF12	I C	
IC1971	BA51W12ST-V5	I C	

OTHERS

⚠	Symbol No.	Part No.	Part Name	Description
		LC30114-001C-H	L.E.D.HOLDER	
		CM35921-005-H	CDS HOLDER	
⚠	CP1981	ICP-N75-Y	I.C.PROTECT	
⚠	CP1982	ICP-N75-Y	I.C.PROTECT	
	EF1801	CE42482-103Y	EMI FILTER	
⚠	F1901	QMF51E2-3R15J4	FUSE	3.15A
	FC1901	CEMG002-001Z	FUSE CLIP	
	J1002	QNN0384-001	PIN JACK	
	J1003	QNN0281-003	PIN JACK	
	J1004	QNN0281-002	PIN JACK	
	J1005	QNS0165-001	PIN JACK	
	K1001	QQR0621-002Z	BEADS CORE	
	K1351	QQR0621-002Z	BEADS CORE	
	K1421	QQR0582-001Z	BEADS CORE	
	K1921-22	QQR1113-001Z	FERRITE BEADS	
	K1923	QQR1114-001Z	FERRITE BEADS	
	K1924	QQR1113-001Z	FERRITE BEADS	
	K1941-43	QQR1113-001Z	FERRITE BEADS	
⚠	LF1901	QQR0906-001	LINE FILTER	
	PC1701	P1241-04	C.D.S.	
⚠	PC1921	PC123F2	I.C.(PH.COUPLER)	
⚠	RY1971	CESK028-001	RELAY	
	S1701	QSW0619-003Z	PUSH SWITCH	VOL +
	S1702	QSW0619-003Z	PUSH SWITCH	VOL -
	S1703	QSW0619-003Z	PUSH SWITCH	CH +
	S1704	QSW0619-003Z	PUSH SWITCH	CH -
	S1705	QSW0619-003Z	PUSH SWITCH	MENU
⚠	S1901	QSW0750-001	PUSH SWITCH	POWER SW
	SF1102	QAX0594-001	SAW FILTER	
	SF1122	QAX0325-001	SAW FILTER	
⚠	SK1351	CE42554-001	C.R.T.SOCKET	
⚠	TH1901	QAD0119-9R0	P.THERMISTOR	
	TU1001	QAU0192-001	TUNER	
⚠	VA1901	QAF0052-621	VARISTOR	
	X1301	QAX0500-001Z	CRYSTAL	
	X1302	CE42690-001Z	CRYSTAL	
	X1701	FCR12.0M2S	CER.RESONATOR	
	X1821	QAX0588-001Z	X'TAL	

PACKING

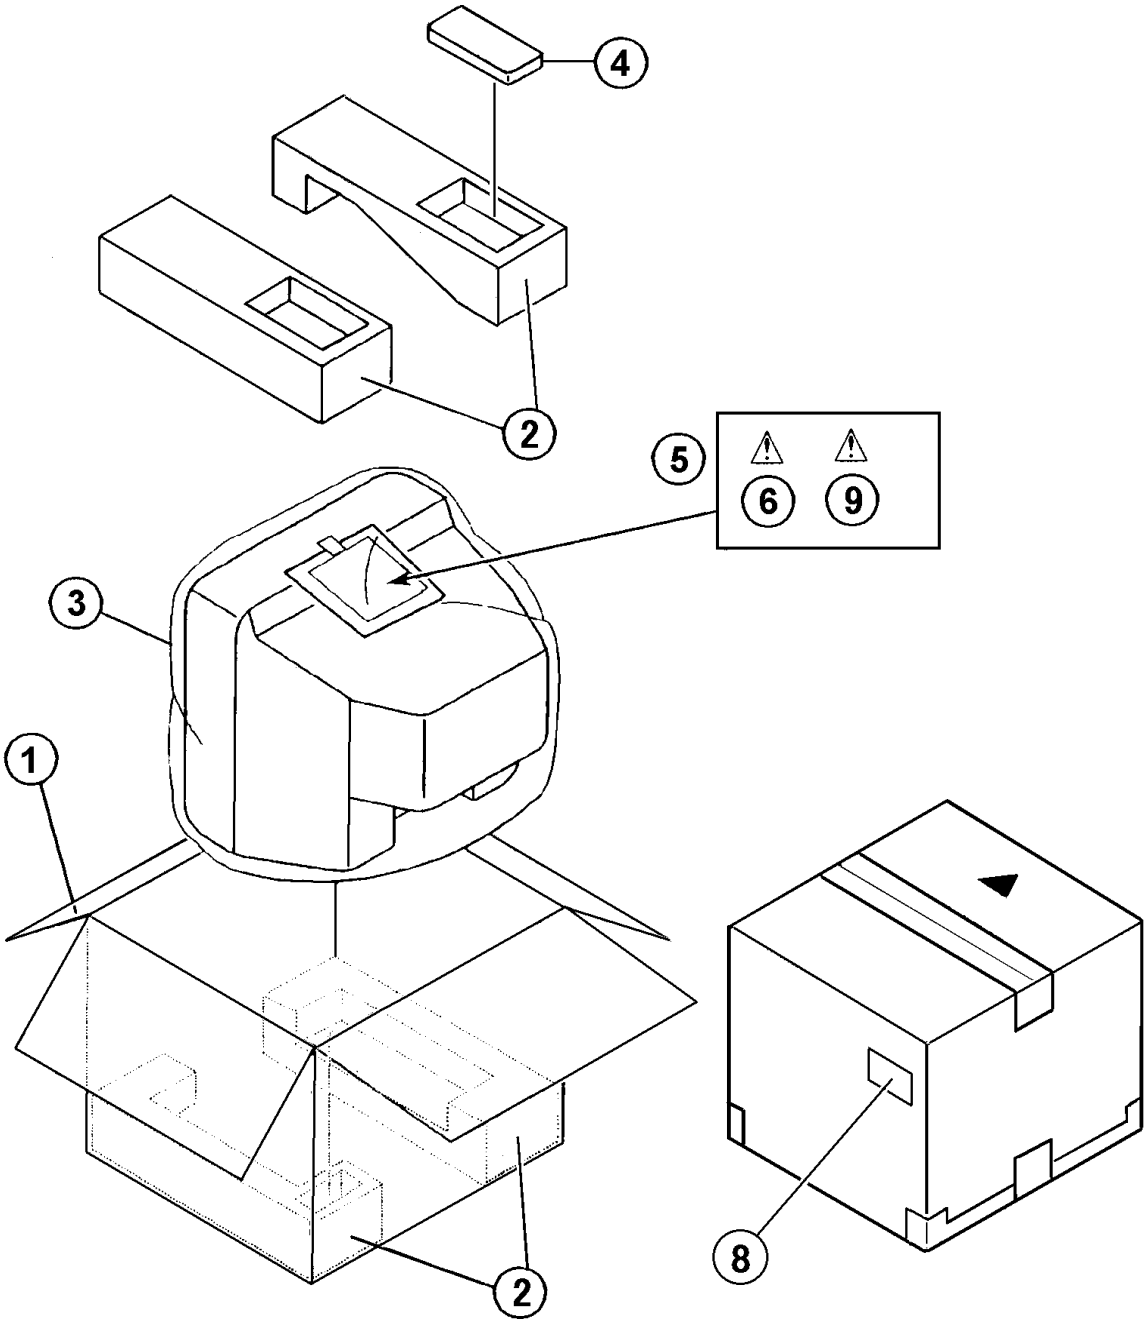

PACKING PARTS LIST

⚠	Ref.No.	Part No.	Part Name	Description
	1	LC10453-091A-H	PACKING CASE	
	2	LC10833-002A-H	CUSHION ASSY	4pcs in 1set
	3	CP30967-002-H	POLY BAG	
	4	RM-C223-2C	REMOCON UNIT	
	5	CP30966-001-H	POLY BAG	
⚠	6	LCT0732-001A-H	INST.BOOK	
	8	CM47385-00B-H	POS/SERIAL LABEL	
⚠	9	CM36447-00A-H	ROD ANTENNA	

REMOTE CONTROL UNIT PARTS LIST (RM-C223-2C)

⚠ Ref.No.	Part No.	Part Name	Description
	3139 224 20073	BATTERY COVER	

JVC
VICTOR COMPANY OF JAPAN, LIMITED
HOME AV NETWORK BUSINESS UNIT 1106 Heta, Iwai-city, Ibaraki-prefecture, 306-0698, Japan